
AODDP CHEMICAL RESISTANCE

GUIDE

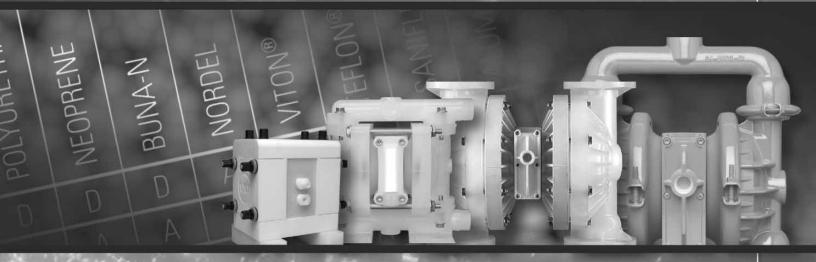

Compatibility Listings

WILDEN A DOVER) COMPANY

WIL-21000-C-04 REPLACES WIL-21000-C-03



This information is compiled from numerous sources and believed to be reliable to this date. It is intended as a guideline to be used with all available information to determine suitability of elastomers and wetted portions of Wilden pumps for various applications. We suggest thorough research which should include known applications when determining pump construction. This chart is to be used at your discretion and risk. The accuracy of these ratings cannot be guaranteed.

SELECTING THE BEST DIAPHRAGM FOR A WILDEN AIR-OPERATED DOUBLE-DIAPHRAGM PUMP

In the absence of previous experience (which is always the best guide) diaphragm material may be selected from available resistance charts. The Wilden Chemical Resistance Guide is compiled from numerous reliable sources and cross-checked, however, it is only intended as an additional source of information.

Diaphragm life not only depends on a diaphragm's chemical compatibility with the process fluid but also on the process conditions. These conditions will vary depending on the abrasiveness of your process fluid, temperature, size of diaphragm, pumping media, and lift conditions. Consult your authorized Wilden distributor regarding which diaphragm material will work best for your application requirements.

AS A GENERAL RULE:

- 1. Neoprene or Wil-Flex™ diaphragms should generally be used unless the chart shows them to be unsatisfactory. Even though Buna-N, Nordel® and Viton® may show "A" ratings, if neoprene or Wil-Flex™ have at least a "B" rating, it will probably be the most economical choice on a "cost of diaphragms per gallon pumped" basis.
- 2. This is especially true when considering the use of Viton® diaphragms due to their replacement cost being over six times that of neoprene. Viton® should only be considered for aggressive media at extreme temperatures if it shows an "A" rating and neoprene, Buna-N and Nordel® show an unsatisfactory rating.

These guides for best diaphragm selection do not hold for the valve ball material. Because the diaphragms are securely gripped by their inner and outer beads, they can stand up to 20% swell without affecting pump performance. If the valve balls swell even a very small

amount, they cannot function properly. Therefore, there will be cases where Neoprene diaphragms will be the best selection but Teflon®, Buna-N, Nordel® or polyurethane balls will be required.



CAUTION: Temperature limits are based upon mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperatures. Consult engineering guides for chemical compatibility and temperature limits.

It must be emphasized that none of these figures are absolute and are only general guidelines.

SELECTION OF PLASTIC MATERIALS

Many factors can affect the chemical resistance of plastics. These include, but are not limited to, exposure time, extremes of temperature and pressure, frequency of temperature and/or pressure cycling, attrition due to abrasive particles, and the type of mechanical stress imposed. The fact that certain combinations of chemicals and mechanical load can induce stress cracking in many otherwise chemically resistant materials, both metallic and non-metallic, is of particular significance.

The chemical/temperature ratings presented are based on well-processed or well fabricated test specimens being essentially resistant to either chemical attack and/ or severe swelling which would normally impair their performance under moderate mechanical stresses.

Operating parameters are dependent upon the particular application of polypropylene or PVDF and may differ from those experienced in either laboratory testing or apparently similar field service. Because corrosive fluids or vapors are often mixtures of various individual chemicals, it is strongly recommended that trial installations be evaluated under actual service conditions.

For example, immersion testing in individual chemicals at a specific operating temperature doesn't predict the performance of polypropylene or PVDF should an exothermic reaction take place when mixtures of chemicals are involved.

The ratings given on the following pages are a guide and do not constitute a warranty of any kind, expressed or implied, with respect to the performance of the materials Wilden offers in any specific application.

COPYRIGHT 2005 WILDEN PUMP & ENGINEERING CO., GRANDTERRACE, CA Nordel® and Viton® are registered trademark of DuPont Dow Elastomers.

Teflon® is a registered trademark of DuPont.

Saniflex and Wil-Flex are trademarks of Wilden Pump & Engineering, LLC.



| CHEMICALS | | | E | AST | OME | RS | | | | | MET | ALS | | | | P | LASTIC | cs | | |
|---------------------------------------|-----------|--------------|----------|--------|--------|-------------|---------|---------------|----------|--|-----------------------|---------|---------------------|-----------|----------------------------|------------|---------------|--------------|-------|-----|
| | | | | | | | | | | | | | | | ~ | | | | | |
| | WIL-FLEX™ | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX™ TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NYLON | CARBON-FILLED ACETAL (CFA) | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| ACETALDEHYDE | В | D | D | D | Α | D | Α | - | В | Α | Α | Α | A/100 | B/70 | Α | A/212 | С | С | D | D |
| ACETAMIDE | Α | D | Α | Α | Α | Α | Α | - | Α | Α | Α | - | A/200 | B/120 | Α | A/250 | A/70 | A/70 | A/140 | D |
| ACETATE SOLV | В | D | D | D | С | - | Α | - | В | D | Α | - | A/100 | Α | - | A/175 | B/72 | B/72 | Α | D |
| ACETIC ACID, GLACIAL | В | С | D | D | В | D | Α | В | В | D | Α | Α | A/100 | D | D | A/250 | A/100 | D | A/120 | D |
| ACETIC ACID | В | С | С | С | Α | С | Α | Α | В | D | Α | Α | A/100 | D | D | A/250 | B/70 | A/120 | Α | D |
| ACETIC ANHYDRIDE | Α | D | В | D | В | D | Α | D | В | D | Α | Α | A/200 | D | D | A/250 | С | D | B/70 | D |
| ACETONE | В | D | D | D | Α | D | Α | В | Α | Α | Α | Α | A/200 | B/120 | Α | A/212 | D | B/70 | D | D |
| ACETONITRILE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| ACETOPHENONE | В | D | D | D | Α | D | Α | - | В | Α | В | - | A/200 | Α | - | A/250 | A/70 | - | A/70 | - |
| ACETYL CHLORIDE | В | D | D | D | С | В | Α | - | D | Α | В | - | A/100 | D | - | A/212 | - | D | A/120 | С |
| ACETYLENE | C | - | В | A | A | A | Α | Α | A | Α | A | - | A/200 | A | Α | - | B/72 | D | A | A |
| ACRYLONITRILE | В | - | D | D | D | D | Α | - | В | Α | Α | В | - | B/70 | - | A/140 | В | A | A/70 | В |
| ADIPIC ACID | В | - | D | В | - | - | Α | - | В | В | В | - | - | - | - | A/175 | В | A | В | A |
| ALCOHOLS | 1 | | | | | | | | - | | | | | | | 7,170 | | | | |
| ALLYL | 1 - | - | - | - | - | - | - | - | - | - | - | - | - | | - | A/212 | - | - | - | - |
| AMYL | l A | С | В | В | Α | В | Α | Α | В | В | Α | А | A/200 | Α | Α | - | В | B/120 | Α | А |
| BENZYL | A | - | В | D | C | A | A | - | В | В | A | A | A/200 | D | Α | - | A/70 | D D | A | D |
| BUTYL | A | D | A | A | A | Α | Α | - | В | В | A | A | - | A | Α | - | В | A | A | A |
| DIACETONE | C | В | D | D | В | D | Α | - | A | A | A | A | - | A | Α | - | B/72 | B/72 | A/70 | В |
| ETHYL | В | D | A | A | A | A | A | А | В | A | A | A | - | В | A | - | A | В В | A | С |
| HEXYL | В | D | В | A | В | A | A | - | A | A | A | A | - | A | A | - | A/70 | A | A | A |
| ISOBUTYL | A | D | A | C | A | A | A | _ | В | C | A | A | _ | B/70 | A | - | - | A/120 | A | A |
| ISOPROPYL | В | D | В | C | В | A | A | Α | В | C | A | A | A/70 | B/70 | A | A/140 | A | A/120 | A/150 | A |
| METHYL | A | D | A | A | В | D | Α | A | В | A | A | A | A/70 | B/70 | A | - | A/120 | A/70 | A A | Α |
| OCTYL | В | D | В | В | A | A | A | - | A | A | A | A | - | Α | Α | - | 7 4 120 | A | - | - |
| PROPYL | A | D | A | A | В | A | A | _ | A | A | A | A | A/70 | В | A | - | A | A/120 | A/120 | Α |
| ALLYL CHLORIDE | - | - | - | - | - | - | - | _ | - | - | - | - | - | - | - | A/212 | - | | | - |
| ALKAZENE | D | В | D | D | D | A | A | - | | - | - | | _ | - | - | ryziz | | | | _ |
| ALUM-NH3-CR-K | A | - | A | A | A | D | A | - | - | - | _ | | | | _ | A/250 | - | | A | _ |
| ALUMINUM ACETATE | A | D | В | C | A | D | A | - | A | D | В | В | - | - | - | | - | - | - | - |
| ALUMINUM CHLORIDE 100% | I A | - | - | - | _ A | - | - A | - | _ A | - | - | - | - | | - | A/212 | - | - | - | - |
| ALUMINUM CHLORIDE 20% | A | В | A | A | A | A | A | D | В | D | С | A | _ | D | С | | A | B/120 | A | A |
| ALUMINUM FLUORIDE | A | С | A | A | В | - | A | - | В | D | C | В | A | B/70 | С | A/250 | A | A/70 | A | A |
| ALUMINUM HYDROXIDE | A | - | A | A | A | A | A | | A | D | A | - | A | B/70 | A | A/250 | A | A/120 | A | A |
| ALUMINUM NITRATE | A | С | A | A | A | A | A | - | В | D | A | | A | B/70 | В | A/250 | A | A/120 | A | В |
| ALUMINUM PHOSPHATE | A | - | A | A | A | A | A | - | - | - | A | - | - | - | - | | - | - Ay 120 | - | - |
| ALUMINUM POTASSIUM SULFATE (ALUM) | A | - | A | A | A | A | A | - | В | D | A | В | - | D | C | - | A | A/120 | A | A |
| ALUMINUM SULFATE | В | D | A | A | A | A | A | D | C | D | A | A | A | A/120 | В | A/100 | A | A/120 | A | A |
| AMINES | A | D | В | D | - A | D | - A | - | A | D | A | - A | D | D D | D | - Ay 100 | - | C/70 | - | D |
| AMMONIA, ANHYDROUS | A | D | A | В | A | D | A | - | В | D | A | A | A/200 | B/70 | D | - | A/70 | B/120 | D | A |
| AMMONIA, GAS (COLD) | A | - | A | A | D | A | A | - | - | - | - | - | - A/ 200 | - | A | - | В | - | D | - |
| AMMONIA, GAS (COLD) | A | - | В | C | C | D | A | - | - | - | - | | - | - | A | - | - | - | - | - |
| AMMONIA, LIQUIDS | A | В | A | В | A | D | A | - | D | | - | В | - | B/70 | D | A/250 | A/70 | C/70 | A | A |
| AMMONIA, LIQUIDS AMMONIA, WATER | - A | - D | - A | _ B | - A | - U | - A | - | - | A - | A | _ D | - | B//U - | - | A/250 | A/70 | - | - A | - A |
| AMMONIA NITRATE | A | D | C | A | - | | - | - | C | A | A | - | - | D | C | Py ZOU | A | A | A | В |
| | A | | A | A | _ | A | A | | D | D | _ | В | | - U | D | V /JEU | _ | | A | |
| AMMONIUM BIFLUORIDE | _ | - | | _ | - A | | | - | С | _ | A | В | Α | | | A/250 | A/70 | A/120 | | Α |
| AMMONIUM CARBONATE AMMONIUM CASENITE | A | - | A | D | A . | B - | _ A | _ | L | C - | A | - B | A | A - | D A | A/250 - | - A | B/120 | A | A - |
| | + | - | _ | | _ | - | | | C | - | C | _ | | C | В | | | Λ/120 | - Λ | |
| AMMONIUM CHLORIDE | A | A - | A - | _ A | A . | A - | A - | A - | L | D - | U | A - | _ A | - - | - B | A/250 | A | A/120 | Α - | A - |
| AMMONIUM FLUORIDE AMMONIUM HYDROXIDE | _ | - D | | _ | - | - | | - D | _ | _ | - | _ | | | C | A/250 | - A | | | - |
| | A | _ | A | В | A | В | Α | _ | С | A | A | A | A/200 | A | | A/250 | A | A/70 | A | Α |
| AMMONIUM NITRATE | Α | D | Α | Α | Α | В | Α | - | В | Α | Α | Α | A | В | Α | A/212 | Α | A/70 | Α | Α |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | Εl | AST | OME | RS | | | | | MET | ALS | | | | P | LASTIC | es | | |
|---------------------------------|------------------------|--------------|----------|--------|--------|--------|---------|---------------|----------|-----------|-----------------------|---------|---------------------|-------|----------------------------|-------|---------------|--------------|--------|-----|
| - OTTENHOLIE | | | | | | | | | | | 1/ | | | | · · | | | | | |
| | WIL-FLEX TM | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX™ TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NYLON | CARBON-FILLED ACETAL (CFA) | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| AMMONIUM NITRITE | Α | - | Α | Α | Α | - | Α | - | - | - | - | - | - | - | - | A/212 | A/70 | - | Α | - |
| AMMONIUM OXALATE | Α | - | Α | Α | - | - | - | - | - | D | Α | Α | - | - | В | - | - | - | - | Α |
| AMMONIUM PERSULFATE | Α | D | Α | D | В | Α | Α | - | С | D | Α | Α | A/150 | D | D | - | Α | A/120 | Α | Α |
| AMMONIUM PHOSPHATE, DIBASIC | Α | - | Α | Α | Α | Α | Α | - | В | D | Α | Α | A/70 | D | В | A/250 | Α | A/120 | Α | Α |
| AMMONIUM PHOSPHATE, MONOBASIC | Α | - | Α | Α | Α | Α | Α | - | В | D | Α | Α | - | В | В | A/250 | Α | А | Α | Α |
| AMMONIUM PHOSPHATE, TRIBASIC | Α | - | Α | Α | Α | Α | Α | - | В | D | Α | Α | - | В | В | A/250 | Α | С | Α | Α |
| AMMONIUM SULFATE | Α | Α | Α | Α | Α | D | Α | В | В | С | Α | В | А | B/70 | В | A/250 | Α | A/70 | Α | Α |
| AMMONIUM THIO-SULFATE | Α | - | Α | Α | Α | - | Α | - | - | D | Α | - | - | - | В | - | - | Α | - | - |
| AMYL-ACETATE | В | D | D | D | В | D | Α | В | В | С | Α | В | A/100 | С | В | A/250 | C/70 | C/70 | A/120 | D |
| AMYL-ALCOHOL | В | D | В | В | Α | В | Α | Α | В | В | Α | Α | А | B/70 | Α | A/250 | В | B/120 | Α | Α |
| AMYL-BORATE | В | - | В | Α | D | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| AMYL-CHLORIDE | С | - | D | D | D | Α | Α | - | D | Α | Α | Α | А | D | Α | A/250 | D | D | Α | D |
| AMYL-CHLORONAPTHALENE | С | D | D | В | D | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| AMYL-NAPTHALENE | С | D | D | D | D | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| ANILINE | В | - | D | D | - | D | Α | D | С | С | Α | В | A/100 | С | Α | A/250 | В | С | C/70 | С |
| ANILINE DYES | В | D | В | С | Α | Α | Α | - | В | Α | В | - | - | - | - | - | - | - | - | - |
| ANILINE HYDROCHLORIDE | Α | D | D | С | В | В | Α | - | D | D | D | - | - | D | - | A/140 | - | D | Α | В |
| ANIMAL FATS | В | В | В | Α | Α | Α | Α | - | Α | Α | Α | - | - | - | Α | - | - | - | - | - |
| ANTIMONY TRICHLORIDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| ANSUL ETHER | D | В | D | С | С | D | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| ANTI-FREEZE | Α | - | С | Α | - | Α | - | - | Α | Α | Α | - | - | D | D | - | Α | - | - | Α |
| AQUA REGIA (80%, HCI, 20% HNO3) | D | D | D | D | С | С | Α | - | D | D | D | D | A/100 | D | D | A/212 | В | B/70 | A/70 | С |
| AROCHLOR(S)1248 | D | - | D | D | С | Α | Α | - | Α | В | Α | - | - | B/70 | - | A/175 | - | C/70 | - | - |
| AROMATIC HYDROCARBONS | С | D | D | D | D | Α | Α | - | Α | Α | Α | - | - | Α | Α | - | D | С | - | D |
| ARSENIC ACID | Α | С | Α | Α | Α | Α | Α | - | D | D | Α | - | А | С | D | A/250 | Α | B/120 | Α | Α |
| ARSENIC TRICHLORIDE | В | - | Α | С | D | D | Α | - | D | D | D | - | - | - | D | - | - | - | - | - |
| ASKAREL | D | D | С | В | D | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| ASPHALT | В | В | В | В | D | Α | Α | D | С | Α | Α | - | - | Α | В | - | Α | A/70 | Α | Α |
| BARIUM CARBONATE | Α | - | - | Α | Α | Α | Α | - | В | Α | Α | - | А | B/70 | Α | A/250 | Α | B/120 | Α | Α |
| BARIUM CHLORIDE | Α | Α | Α | Α | Α | Α | Α | - | D | С | С | Α | А | B/120 | Α | A/250 | Α | A/70 | Α | Α |
| BARIUM CYANIDE | Α | - | Α | С | - | Α | - | - | С | С | Α | - | - | - | В | - | - | В | - | D |
| BARIUM HYDROXIDE | Α | Α | Α | Α | Α | Α | Α | D | D | D | Α | В | А | B/70 | D | A/250 | Α | B/120 | Α | Α |
| BARIUM NITRATE | Α | - | Α | Α | - | Α | - | - | В | Α | Α | - | A/73 | B/70 | В | - | - | B/120 | - | Α |
| BARIUM SULFATE | Α | Α | - | Α | Α | Α | Α | - | D | В | Α | - | Α | B/70 | В | A/250 | Α | B/120 | Α | В |
| BARIUM SULFIDE | Α | Α | Α | Α | Α | Α | Α | - | D | D | Α | - | Α | B/70 | Α | A/250 | Α | B/120 | Α | Α |
| BEER | Α | D | Α | Α | Α | Α | Α | Α | Α | D | Α | - | A/150 | B/70 | Α | - | B/70 | A/120 | A/175 | Α |
| BEET SUGAR LIQUIDS | Α | D | В | Α | Α | Α | Α | - | Α | Α | Α | - | - | Α | В | - | Α | A/70 | Α | Α |
| BEET SUGAR LIQUORS | Α | D | Α | Α | Α | Α | Α | - | Α | В | Α | - | A/150 | - | Α | - | - | - | - | - |
| BENZALDEHYDE | В | D | D | D | В | D | Α | - | В | Α | Α | - | A/73 | С | Α | A/212 | D | A/70 | A/70 | D |
| BENZENE | С | D | D | D | D | Α | Α | В | В | Α | Α | В | A/200 | Α | Α | A/212 | B/72 | C/70 | A/70 | С |
| BENZENESULFONIC ACID | Α | D | Α | С | С | Α | Α | - | D | D | В | - | A/200 | D | С | A/250 | - | A/70 | A/70 | Α |
| BENZYL BENZOATE | С | - | D | D | В | Α | Α | - | Α | В | В | - | - | - | - | - | - | - | - | - |
| BENZYL CHLORIDE | С | D | D | D | D | С | Α | - | D | D | В | - | A/100 | Α | Α | A/250 | D | - | С | - |
| BENZOIC ACID | Α | D | D | D | В | Α | Α | - | В | D | Α | Α | A/250 | D | В | A/250 | В | A/70 | Α | Α |
| BENZOL | В | D | D | D | D | D | Α | Α | В | В | Α | Α | - | D | Α | - | D | C/70 | A/70 | - |
| BENZOL, ALCOHOL | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| BLAST FURNACE GAS | Α | D | Α | С | В | Α | Α | - | - | - | - | - | - | - | D | - | - | - | - | - |
| BLEACH SOLUTIONS | В | D | D | D | Α | Α | Α | - | D | - | - | - | А | - | D | A/250 | В | A/70 | - | - |
| BORAX (SODIUM BORATE) | Α | Α | D | В | Α | Α | Α | Α | С | Α | Α | Α | А | Α | В | A/250 | Α | A/120 | Α | Α |
| BORDEAUX MIXTURE | Α | D | Α | Α | Α | Α | Α | - | D | С | Α | - | - | - | - | - | - | - | - | - |
| | | | | | | | | | | | | | | | | | | | | |
| BORIC ACID BRINE | A | A | A | A | A | A | A | Α | B C | D C | Α | A | A A | В | A | A/250 | A | A/120 | A A | A - |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | El | AST | OME | RS | | | | | MET | ALS | | | | P | LASTIC | cs | | |
|-------------------------------------|-----------|--------------|----------|--------|--------|--------|---------|----------------------------|----------|-----------|-----------------------|---------|---------------------|-----------|----------------------------|----------------|---------------|--------------|--------|--------|
| ONEMIONEO | | | | | | | | | | | -1 / | | | | FA) | | | | | |
| | WIL-FLEX™ | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX TM TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NATON | CARBON-FILLED ACETAL (CFA) | ETE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| BREWERY SLOP | Α | - | Α | Α | - | Α | - | - | - | Α | Α | - | - | - | - | - | - | - | - | - |
| BROMINE | С | D | D | D | С | Α | Α | - | D | - | D | Α | A/150 | D | D | - | B/72 | D | A/150 | С |
| BROMINE-ANHYDROUS | С | D | D | - | С | Α | Α | D | D | D | D | - | - | D | - | - | D | - | A/150 | - |
| BROMINE-TRIFLUORIDE | C | D | D | D | D | D | Α | - | D | D | В | - | - | - | D | - | D | - | - | - |
| BROMINE-VAPOR | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| BROMINE-WATER | В | D | В | - | - | A | Α | - | D | D | В | - | A/250 | - | D | A/212 | D | - | A | - |
| BROMOBENZENE | D | D | D | D | D | В | A | - | D | В | В | - | A/73 | - | - | - | D | - | - | - |
| BUNKER OIL | В | В | В | A | D | A | Α | - | A | Α | A | - | - A (000 | - | - | - A (050 | - | - | - | - |
| BUTADIENE | C | D | В | A | C | A | Α | - A | Α | - | A | - | A/200 | - D/70 | Α | A/250 | - D/72 | D 0.770 | A /200 | C |
| BUTANE | C B | A | В | Α | C | A | Α | _ A | Α | - D | A | - | A/200 - | B/70 - | Α | A/250 | B/72 - | C/70 - | A/200 | C - |
| BUTTER BUTTERMILK | A | Α | B A | Α | _ A | A | - A | - | Α | D | A | - | | | A | - | | A/70 | - | - A |
| BUTYL ACETYL RICINOLEATE | В | - D | В | A | D | A | A | - | A | A | A | - | - | B/70 | A | - | - | A/70 | - | - A |
| BUTYL ACETATE BUTYL ACETATE | В | С | D | D | В | D | A | В | A | A | C | В | A/150 | A | A | A/250 | D | C/70 | A/70 | D |
| BUTYL ACRYLATE | C | - | D | D | D | D | A | - | - | - | - | - | - | - | A | | D | - | A/70 | - |
| BUTYL ALCOHOL | - | - | - | - | - | - | - | - | - | - | - | - | _ | | - | A/250 | - | - | - | - |
| BUTYL AMINE | Α | D | D | В | D | D | Α | - | Α | - | - | В | - | А | С | B/175 | - | - | B/70 | D |
| BUTYL BENZOATE | С | - | D | - | В | A | Α | - | В | В | В | - | - | - | Α | - | - | - | - | - |
| BUTYL CARBITOL | В | - | В | Α | Α | Α | Α | - | - | - | - | - | - | - | Α | - | - | - | - | - |
| BUTYL CELLOSOLVE | Α | D | С | В | Α | С | Α | - | - | - | - | - | A/73 | - | Α | - | - | - | - | - |
| BUTYL CHLORIDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| BUTYL ETHER | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| BUTYL OLEATE | С | - | D | - | В | Α | Α | - | - | - | - | - | - | - | Α | - | - | - | - | - |
| BUTYL PHTHALATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/140 | - | - | - | - |
| BUTYL STEARATE | С | - | D | Α | В | Α | Α | - | В | В | В | - | A/73 | - | Α | - | - | - | - | - |
| BUTYLENE | D | D | - | В | D | Α | Α | - | Α | - | Α | - | Α | B/70 | Α | - | D | B/70 | Α | Α |
| BUTRALDEHYDE | С | С | С | D | В | D | Α | - | - | - | - | - | - | - | - | - | D | - | В | - |
| BUTYRIC ACID, AQEOUS | Α | - | D | D | C | D | Α | - | В | - | Α | Α | А | B/70 | С | A/250 | А | D | Α | В |
| CAFFIENE CITRATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/140 | - | - | - | - |
| CALCIUM BISULFATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| CALCIUM BISULFIDE | D | Α | A | A | - | A | - | - | C | - | В | A | A | A | Α | - A (040 | A | B/70 | A | A |
| CALCIUM CARBONATE CALCIUM CHLORIDE | A | - ^ | Α | A | A | A | Α | - A | C | - C | A C | A | A A | A B/70 | A D | A/212 A/250 | A A | B/70 B/70 | A | C |
| CALCIUM HYDROXIDE | A | A | A | A | A | A | A | A B | C | A | A | A | A | A/120 | D | A/250 | A | A/120 | A | В |
| CALCIUM HYPOCHLORITE | A | D | В | В | В | A | A | В | C | D | A | A | A | C C | D | A/250 | A | A/70 | A | В |
| CALCIUM NITRATE | A | A | A | A | A | A | A | - | В | С | В | В | A | D | D | A/250 | A | A/70 | A | A |
| CALCIUM SULFATE | A | - | D | A | A | Α | Α | - | В | A | A | В | A | D | D | A/250 | A | B/70 | A | В |
| CALCIUM SULFIDE | A | Α | В | A | A | A | Α | - | A | В | В | - | - | - | - | A/250 | A/120 | - | A | - |
| CALGON | A | - | A | A | - | Α | - | - | - | D | A | - | - | А | Α | - | A | - | - | - |
| CANE JUICE | Α | D | Α | Α | | - | - | - | В | Α | Α | - | - | Α | Α | - | B/72 | - | Α | Α |
| CANE SUGAR LIQUORS | Α | D | Α | Α | Α | Α | Α | - | Α | В | Α | - | A/150 | - | - | - | Α | - | - | - |
| CARBAMATE | Α | D | В | С | В | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| CARBITOL | В | D | В | В | В | Α | Α | - | В | В | В | - | - | - | - | - | С | - | А | - |
| CARBOLIC ACID (SEE PHENOL) | Α | С | С | D | С | Α | А | D | В | D | Α | Α | A/150 | С | D | - | С | D | A/70 | D |
| CARBON BISULFIDE | D | С | D | D | D | Α | Α | В | Α | - | Α | - | - | Α | Α | - | B/72 | - | Α | D |
| CARBON DIOXIDE | Α | Α | В | Α | Α | В | Α | Α | Α | D | Α | Α | Α | B/70 | Α | A/250 | А | A/70 | Α | Α |
| CARBON DISULFIDE | D | С | D | D | D | Α | Α | - | С | Α | Α | В | A/200 | B/70 | Α | A/250 | B/72 | C/70 | A/70 | D |
| CARBON MONOXIDE | Α | Α | В | Α | С | Α | Α | Α | Α | Α | Α | В | A/150 | Α | Α | A/250 | Α | A/120 | В | Α |
| CARBON TETRACHLORIDE | D | С | D | С | D | Α | Α | D | D | С | Α | Α | A/200 | D | Α | A/250 | B/72 | D | Α | D |
| CARBONATE WATER | Α | - | Α | A | - | Α | - | - | Α | D | A | - | - | A | A | - | Α | A | Α | Α |
| CARBONIC ACID | A | Α | A | В | Α | A | Α | - | A | D | В | Α | A | B/70 | В | A/250 | A | B/120 | Α | A |
| CATSUP | Α | - | С | Α | - | Α | - | Α | D | D | Α | - | - | А | В | - | Α | - | - | Α |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | 31 | .AST | OME | RS | | | | | MET | ALS | | | | P | LASTIC | s | | |
|------------------------------|-----------|--------------|----------|--------|--------|--------|---------|---------------|----------|-----------|-----------------------|---------|---------------------|-------|----------------------------|---------|---------------|--------------|-------|----------|
| | | | | | | | | | | | | | | | æ | | | | | |
| | WIL-FLEX™ | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX™ TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NATON | CARBON-FILLED ACETAL (CFA) | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| CELLOSOLVE | С | D | С | С | Α | В | Α | - | В | В | В | - | A/200 | Α | Α | A/250 | Α | - | Α | - |
| CELLOSOLVE ACETATE | С | D | D | С | Α | Α | Α | - | - | - | - | - | A/73 | - | Α | - | - | - | A/120 | - |
| CELLULUBE | D | D | D | D | Α | Α | Α | - | - | - | - | - | - | - | Α | - | - | - | - | - |
| CLORACETIC ACID | D | D | D | D | В | D | Α | - | D | D | С | Α | А | D | D | - | B/72 | - | А | - |
| CHLORINATE GLUE | С | - | D | С | - | Α | - | - | D | D | Α | - | - | - | D | - | - | - | - | - |
| CHLORINE (DRY) | С | D | D | D | С | Α | Α | D | D | D | - | Α | A/150 | D | D | - | D | D | А | D |
| CHLORINE (WET) | С | D | D | D | D | Α | Α | D | D | В | D | Α | A/200 | С | D | A/100 | D | B/70 | Α | - |
| CHLORINE, ANHYDROUS LIQUID | D | - | D | D | - | Α | Α | D | D | D | D | Α | - | С | D | - | D | D | Α | D |
| CHLORINE DIOXIDE | D | - | D | D | С | Α | Α | D | D | D | D | Α | A/200 | - | - | A/250 | - | - | Α | - |
| CHLORINE GAS (DRY) | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| CHLORINE GAS (WET) | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| CHLORINE TRIFLUORIDE | D | D | D | D | D | С | Α | D | D | D | Α | - | - | - | - | - | - | - | - | - |
| CHLOROACETIC ACID | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| CHLOROACETONE | С | D | С | D | D | В | Α | D | D | В | В | - | - | - | В | - | D | D | - | - |
| CHLOROBENZENE (MONO) | С | D | D | D | D | Α | Α | D | D | В | Α | Α | A/100 | B/70 | В | A/250 | D | D | A/150 | D |
| CHLOROBROMOMETHANE | D | D | D | D | В | Α | Α | D | D | В | В | - | - | - | В | - | D | Α | - | D |
| CHLOROBUTADIENE | С | D | D | D | D | Α | Α | D | D | В | Α | - | - | - | - | - | D | - | - | - |
| CHLORODODECANE | D | D | D | D | D | Α | Α | D | D | - | - | - | - | - | - | - | D | - | - | - |
| CHLOROFORM | D | С | D | D | D | Α | Α | D | D | D | Α | В | A/200 | D | Α | A/212 | D | C/70 | Α | D |
| 1-CHLORONAPTHALENE | D | - | D | D | D | Α | Α | D | D | В | В | - | - | - | - | - | D | - | - | - |
| 1-CHLORO 1-NITRO ETHANE | С | D | D | D | D | С | Α | D | D | - | - | - | - | - | - | - | D | - | - | - |
| CHLOROSULFONIC ACID | А | D | D | D | D | D | Α | D | D | D | D | В | - | D | D | - | D | D | D | D |
| CHLOROTOLUENE | С | D | D | D | D | Α | Α | D | D | В | В | - | - | - | Α | - | D | - | - | - |
| CLOROX® (BLEACH) | В | D | В | С | - | Α | Α | D | D | D | Α | Α | - | Α | D | - | В | - | - | Α |
| CHOCOLATE SYRUP | А | - | - | Α | - | Α | - | - | Α | D | Α | - | - | Α | Α | - | Α | - | - | - |
| CHROMIC ACID 5% | А | D | D | D | Α | Α | Α | - | С | D | Α | Α | A/200 | D | D | B/250 | A/70 | D | A/120 | Α |
| CHROMIC ACID 50% | А | D | D | D | С | Α | Α | - | С | D | В | Α | A/200 | С | D | B/250 | A/70 | D | A/120 | D |
| CHROMIUM ALUM | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | B/250 | - | - | - | - |
| CHROME PLATING SOLUTIONS | В | D | D | D | D | Α | Α | D | D | D | D | Α | - | - | D | - | В | - | Α | - |
| CIDER | А | - | Α | Α | - | Α | - | D | В | D | Α | - | - | - | Α | - | - | В | - | Α |
| CITRIC ACID | А | Α | Α | Α | Α | Α | Α | Α | С | D | Α | Α | А | B/70 | С | A/140 | Α | D | Α | В |
| CITRIC OILS | С | - | D | Α | В | Α | Α | - | С | D | Α | - | - | - | В | - | Α | - | - | - |
| COBALT CHLORIDE (2N) | А | D | Α | Α | С | Α | Α | - | D | D | - | - | - | - | - | - | Α | - | - | - |
| COFFEE | А | D | Α | Α | - | Α | - | - | Α | - | Α | Α | - | Α | Α | - | Α | - | - | - |
| COKE OVEN GAS | В | D | С | С | D | Α | Α | - | - | - | - | - | А | - | - | - | - | - | - | - |
| COPPER ACETATE | А | D | В | В | Α | - | Α | Α | D | D | С | - | - | - | Α | - | - | - | - | - |
| COPPER CHLORIDE | А | Α | В | Α | Α | Α | Α | Α | D | D | D | - | А | Α | Α | A/250 | Α | - | Α | Α |
| COPPER CYANIDE | А | Α | Α | Α | Α | Α | Α | Α | D | D | Α | Α | А | B/70 | Α | A/250 | Α | B/120 | Α | Α |
| COPPER FLUOBORATE | А | - | Α | В | - | Α | - | Α | D | D | D | В | - | - | В | - | - | - | - | Α |
| COPPER FLUORIDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| COPPER NITRATE | А | - | Α | Α | Α | Α | Α | Α | D | D | Α | Α | А | D | Α | A/250 | Α | B/120 | Α | Α |
| COPPER SULFATE (5% SOLUTION) | А | Α | Α | Α | Α | Α | Α | Α | D | D | Α | Α | А | С | D | A/250 | Α | A/120 | Α | Α |
| CREAM | А | - | С | Α | - | Α | - | - | Α | D | Α | - | - | Α | Α | - | Α | - | - | - |
| CRESOLS | С | D | D | D | D | Α | А | - | В | С | Α | В | A/150 | D | В | A/250 | D | C/70 | A/150 | D |
| CRESYLIC ACID | В | D | D | D | D | Α | А | - | С | Α | Α | В | - | D | D | - | С | B/70 | A/150 | D |
| CRUDE OIL | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| CYCLOHEXANE | С | В | D | Α | D | Α | Α | А | Α | В | Α | В | А | А | Α | A/250 | D | B/70 | Α | D |
| CYCLOHEXANOL | В | - | A | В | C | Α | Α | - | C | В | В | A | A | В | Α | A/250 | В | - | A/150 | - |
| CYCLOHEXANONE | C | D | D | D | С | D | Α | - | В | В | В | - | A/73 | A | Α | A/250 | D | D | B/70 | D |
| CYANIC ACID | В | - | D | C | - | - | - | - | - | D | A | - | - | - | D | - | - | - | - | <u> </u> |
| DECALIN (DEKLIN) | C | D | D | D | D | Α | Α | - | - | - | - | - | - | - | - | - | B/120 | - | A/175 | - |
| DECANE | C | В | D | В | C | Α | Α | - | - | - | - | - | - | - | - | A/250 | A/70 | - | -, | - |
| 220,112 | 1 0 | U | | | J | _ ^ | , , , | | | 1 | | | | | | / y Z00 | 1410 | l | 1 | |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | E | AST | OME | RS | | | | | MET | ALS | | | | P | LASTIC | cs | | |
|--|------------------------|--------------|----------|--------|--------|--------|---------|------------|----------|--|-------------|---------|----------------|-----------|----------------------------|----------------|---------------|--------------|--------|--------|
| | | | | | | | | | | | | | 0 | | (CFA) | | | | | |
| | _ | HANE | | | | | | м TPE | 5 | | STEEL (316) | | ECTFE COATED | | CARBON-FILLED ACETAL (CFA) | | /LENE | ENE | | |
| | WIL-FLEX TM | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEXTM | ALUMINUM | CAST IRON | STAINLESS | ALLOY C | HALAR® EI | NATON | CARBON-F | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| DENATURED ALCOHOL | В | D | В | Α | Α | В | Α | - | Α | Α | Α | - | - | - | Α | - | А | - | А | - |
| DETERGENTS | В | Α | В | Α | Α | Α | Α | - | Α | - | Α | - | A/200 | Α | Α | A/250 | Α | D | - | Α |
| DEVELOPING FLUIDS | Α | D | Α | Α | Α | Α | Α | - | - | - | В | - | - | - | Α | - | - | - | - | - |
| DIACETONE | В | В | - | D | Α | D | Α | - | Α | Α | Α | - | A/100 | А | - | A/212 | D | A | A/70 | - |
| DIBENZYL ETHER | С | В | D | D | С | С | Α | - | В | В | В | - | - | - | - | - | - | - | - | - |
| DIBENZYL SEBECATE | C | D | D | D | В | В | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| DIBUTYL AMINE | В | - | D | С | D | В | Α | - | - | - | - | - | - | - | - | - | D | - | - | - |
| DIBUTYL ETHER | В | В | С | В | С | С | Α | - | В | В | В | - | - | - | - | A/212 | D | - | A/20 | - |
| DIBUTYL PHTHALATE | В | C | D | D | A | В | A | A | Α | A | A | - | - 1/000 | A | - | A/140 | C | - | D | - |
| DIBUTYL SEBECATE | В | D | D | D | В | В | Α | Α | - | Α | Α | - | A/200 | - | - | - A /4.40 | B/72 | - | D | - |
| DICHLOROBENZYENE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/140 | - | - | - | - |
| DICHLOROETHYLENE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/175 | - | - | - 450 | - |
| 0-DICHLOROBENZENE | D | D | D | D | D | A | Α | - | D | В | В | - | - | - | - | - | B/70 | - | A/150 | - |
| DICYCLOHEXYLAMINE | D B | B D | D D | D D | C | С | A | - | D | - | - | - | - | - | - | - | D | - | - | - |
| DIESEL FUEL | C | В | D | A | D | B A | A | - | - ^ | - A | - A | - В | A/200 | - ^ | A | - A/250 | - B/70 | - C/70 | - A | - A |
| DIETHYL BENZENE | C | D | D | D | D | A | A | - | _ A | A - | - A | B | A/200 | A . | - A | Ay 230 | - D//U | | - A | - A |
| DIETHYL ETHER | В | A | С | В | D | D | A | - | В | В | В | В | A/200 | C | - | A/212 | - | - | A/70 | D |
| DIETHYL SEBECATE | В | D | D | D | В | A | A | - | А | А | А | | A/200 | - | - | AyZIZ | A/120 | - | A/120 | - |
| DIETHYLAMINE | В | С | В | В | _ D | D | - A | - | A | В | A | A | A/73 | B/70 | В | A/212 | C C | D | A/70 | D |
| DIETHYLENE GLYCOL | A | D | A | A | A | A | A | - | В | A | A | В | A/70 | B/70 | D | | - | B/120 | A | С |
| DIISOBUTYLENE | C | D | C | В | - | A | A | _ | В | В | В | - | - | - | A | A/250 | _ | - | A | - |
| DIISOPROPYL BENZENE | C | - | D | D | D | A | A | - | - | - | - | - | _ | - | A | | - | - | - | - |
| DIISOPROPYL KETONE | C | D | D | D | A | D | Α | - | - | - | - | - | A/73 | - | Α | - | _ | - | - | - |
| DIMETHYL ANILINE | В | - | D | D | В | С | Α | - | Α | - | - | В | A/200 | А | D | A/250 | Α | - | A/70 | D |
| DIMETHYL FORMAMIDE | Α | - | D | С | - | Α | Α | - | Α | Α | Α | - | A/100 | А | С | B/250 | A/120 | А | D | D |
| DIMETHYL PHTHALATE | Α | - | D | D | В | С | Α | - | - | - | В | - | A/200 | С | - | A/250 | A/70 | - | A/70 | - |
| DINITROTOLUENE | В | D | D | D | D | В | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| DIOCTYL PHTHALATE | С | С | D | D | В | Α | Α | Α | Α | Α | Α | - | A/200 | Α | В | A/250 | - | - | - | - |
| DIOCTYL SEBECATE | С | В | D | D | В | В | Α | - | - | - | - | - | - | - | В | - | - | - | - | - |
| DIOXANE | С | D | D | D | Α | D | Α | - | В | Α | Α | - | A/150 | А | В | A/212 | C/120 | - | C/120 | - |
| DIOXOLANE | С | D | D | D | С | В | Α | - | - | - | - | - | - | - | В | - | - | - | - | - |
| DIPENTENE | С | D | D | С | D | Α | Α | - | Α | Α | Α | - | - | - | - | - | - | - | - | - |
| DIPHENYL | C | D | D | D | D | Α | Α | - | Α | В | В | В | - | - | - | A/250 | - | - | A/120 | - |
| DIPHENYL OXIDE | C | D | D | D | D | Α | Α | - | В | Α | Α | В | - | - | D | A/250 | - | - | В | D |
| DISODIUM PHOSPHATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| DOWTHERM OIL | D | В | D | - | D | Α | Α | - | C | В | A | - | A/200 | A | - | - | - | - | - | - |
| DRY CLEANING FLUIDS | D | С | D | С | D | A | Α | - | A | Α | A | - | - | - | - | - | D | - | - | - |
| DYES EPICULOPOLINAPINE | В | - | C | - | - D | A | - | - D | В | - | A | - | - A /200 | A | С | - | - D/70 | - | - | В |
| EPICHLOROHYDRINE EPSOM SALTS (MAGNESIUM SULFATE) | В | D | D | D | В | D | A | D | D | A | A | - В | A/200 | A | В | - A /2E0 | B/70 | A /120 | D | - A |
| ETHANE | C | - В | A B | Α | D D | A | A | - | Α | - A | A | D - | A - | B/70 D | В | A/250 - | A - | A/120 - | A | A |
| | + | | | A | _ | A | | | A | | A | _ | | | A | | D | | A C | A D |
| ETHANOLAMINE ETHER | C | C | B D | B D | B D | D C | A | - | B A | - C | A | B B | - A/200 | A A | D A | A/212 A/212 | C | - D | A/70 | D |
| ETHYL ACETATE | C | D | D | D | В | D | A | В | В | A | A | В | A/200 A/150 | B/120 | A | B/175 | B/72 | A | A/70 | D |
| ETHYL ACETOACETATE | C | С | D | D | В | D | A | - D | А | A | - A | - D | A/73 | - D/ 120 | A | - | - D/1Z | - A | A/70 | - |
| ETHYL ACRYLATE | C | D | D | D | В | D | A | - | A | A | A | - | A/150 | - | A | - | D | - | C | _ |
| EHTYL ALCOHOL (ETHANOL) | - | - | - | - | - | - | - | - | - A | - | - | - | | - | - | A/250 | - | - | - | - |
| ETHYL BENZENE | С | D | D | D | D | Α | Α | - | Α | В | В | A | - | - | Α | A/140 | D | - | С | - |
| ETHYL BENZOATE | C | D | D | D | В | A | A | - | A | A | A | - | - | - | A | - | - | C/120 | D | D |
| ETHYL CELLOSOLVE | В | D | С | С | A | В | Α | - | - | - | - | - | - | - | Α | - | - | | - | |
| ETHYL CELLULOSE | A | В | В | В | В | A | Α | - | В | Α | В | - | - | - | Α | - | - | - | - | - |
| LITTL OLLLOLOUL | _ ^ | ں | טו | ں ا | טו | _ ^ | _ ^ | | ں ا | _ ^ | ט | | | | _^ | | | | | |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | El | AST | OME | RS | | | | | MET | ALS | | | | Р | LASTIC | S | | |
|----------------------------------|-----------|--------------|----------|--------|----------|--------|---------|----------------------------|----------|-----------|-----------------------|---------|---------------------|--------|----------------------------|--------|---------------|--------------|-------|----------|
| | | | | | | | | | | | | | | | 7 | | | | | |
| | WIL-FLEX™ | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX TM TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NATON | CARBON-FILLED ACETAL (CFA) | ETE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| ETHYL CHLORIDE | С | С | Α | Α | С | Α | Α | D | D | С | Α | В | Α | B/70 | Α | A/250 | D | C/70 | Α | D |
| ETHYL CHLOROCARBONATE | Α | D | С | - | - | Α | Α | D | D | Α | - | - | - | - | Α | - | - | - | - | - |
| ETHYL CHLOROFORMATE | С | D | С | - | - | Α | Α | D | D | - | - | - | - | - | Α | - | D | - | - | - |
| ETHYL ETHER | С | С | D | В | D | D | Α | - | С | В | Α | В | A/150 | B/70 | Α | A/212 | С | D | Α | D |
| ETHYL FORMATE | В | - | В | D | В | С | Α | - | С | Α | В | - | A/120 | - | Α | - | - | - | - | - |
| ETHYL MERCAPTAN | C | - | D | D | D | В | Α | - | В | Α | В | - | - | - | - | - | - | - | - | - |
| ETHYL OXALATE | В | Α | D | D | Α | В | Α | - | Α | - | - | - | - | - | - | - | - | - | - | - |
| ETHYL PENTOCHLOROBENZENE | D | С | D | D | D | Α | Α | - | D | - | - | - | - | - | - | - | D | - | - | - |
| ETHYL SILICATE | В | - | Α | Α | Α | Α | Α | - | В | Α | Α | - | - | - | - | - | - | - | - | - |
| ETHYL SULFATE | В | - | - | Α | - | Α | Α | - | - | - | D | - | - | - | - | - | - | - | - | - |
| ETHYLENE | С | - | - | В | С | Α | Α | - | Α | Α | Α | - | - | - | Α | - | - | - | - | - |
| ETHYLENE BROMIDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| ETHYLENE CHLORIDE | D | D | D | D | C | A | Α | - | D | C | Α | В | A | B/70 | Α | A/250 | B/72 | D | Α | D |
| ETHYLENE CHLOROHYDRIN | C | D | В | D | Α | В | Α | - | D | В | В | В | A/73 | D | В | A/250 | D | D | A/70 | D |
| ETHYLENE DIAMINE | A | D | Α | В | A | D | Α | - | D | Α | Α | C | A/73 | B/70 | Α | A/140 | A | A | D | D |
| ETHYLENE DICHLORIDE | D | D | D | D | В | A | Α | D | D | A | Α | В | A/73 | B/70 | Α | A/212 | D | D | A | D |
| ETHYLENE GLYCOL | A | В | Α | A | A | A | Α | Α | Α | В | Α | В | A | B/70 | D | A/250 | A/120 | A/120 | A | A |
| ETHYLENE OXIDE | A | С | D | D | D | D | Α | Α | Α | D | - | Α | А | A/70 | Α | A/212 | D | A | A | D |
| ETHYLENE TRICHOLORIDE | D | D | D | D | D | Α | A | - | D | A | Α | - | - | - | - | A (050 | D | - | A | - |
| FATTY ACIDS | В | - | В | C | D | A | A | - | В | D | A | A | A | B/70 | В | A/250 | B/70 | D | A | A |
| FERRIC CHLORIDE | A | D | В | A | A | A | A | В | D | D | D | В | A | C | D | A/250 | A | A/70 | A | A |
| FERRIC NITRATE | A | А | A | A B | A | A | A | - | D | - D | A | A | A | C | D D | A/250 | A | A/120 | A | A |
| FERRIC SULFATE | A | - D | A | _ | A | A | A | - | D D | _ | A | A B | A | _ | | A/250 | A | A/120 | A | A |
| FERROUS CHLORIDE FERROUS SULFATE | A | D | A | B B | A | A | A | _ | D | D D | D | В | A | D D | D D | A/250 | A | A/120 | A | A |
| FISH OIL | A B | - | A - | A | A . | A | A | - | | - | A - | _ D | _ A | - | - | A/250 | A - | A/120 | A - | A - |
| FLUOBORIC ACID | А | - | A | В | A | A | A | - | D | D | В | A | A/73 | D | A | A/250 | A | A/120 | A | A |
| FLUORINE (LIQUID) | D | - | D | D | C | В | A | - | D | D | А | В | - A/73 | D | D | Ay 230 | D | Ay 120 | A/70 | D |
| FLUOROBENZENE | C | - | D | D | D | A | A | - | D | - | - | - | _ | - | A | - | D | - | | - |
| FLUOROCARBON OILS | D | - | - | - | A | - | A | - | D | - | - | - | - | | - A | - | D | D | - | - |
| FLUOROLUBE | D | - | A | C | A | В | A | - | - | - | - | - | - | - | - | - | - | - | - | - |
| FLUORINATE CYCLIC ETHERS | D | - | - | - | - | - | - | - | D | - | - | - | _ | | - | - | D | _ | - | <u> </u> |
| FLUOSILICIC ACID | A | В | Α | Α | В | - | Α | В | D | D | В | - | A | D | Α | - | A | A/120 | - | D |
| FORMALDEHYDE | B | D | D | C | A | Α | A | В | A | D | A | В | A/200 | n | Α | A/212 | A | B | A/120 | A |
| FORMIC ACID | A | D | D | D | В | В | Α | В | D | D | Α | A | A/250 | D | D | A/250 | A | D | A | Α |
| FREON 11 | D | D | D | С | D | С | Α | A | D | С | Α | Α | A/150 | D | Α | A/212 | D | С | Α | Α |
| FREON 12 (WET) | D | Α | В | Α | В | Α | Α | Α | D | Α | Α | Α | A/150 | D | Α | A/212 | B/72 | A/70 | Α | Α |
| FREON 13 | D | - | Α | Α | А | Α | Α | Α | D | - | - | - | - | - | Α | - | D | - | Α | - |
| FREON 21 | D | - | D | D | D | D | А | Α | D | - | - | - | A/150 | - | Α | A/212 | D | - | Α | - |
| FREON 22 | D | D | Α | D | С | D | Α | Α | D | D | Α | Α | A/150 | В | Α | A/212 | D | - | Α | Α |
| FREON 31 | D | - | Α | D | А | D | Α | Α | D | - | - | - | - | - | Α | - | - | - | - | - |
| FREON 32 | D | - | Α | Α | Α | С | Α | Α | D | - | - | - | - | - | Α | - | - | - | - | - |
| FREON 112 | D | - | В | В | D | Α | Α | Α | D | - | - | - | - | - | Α | - | - | - | - | - |
| FREON 113 | D | В | Α | Α | D | С | Α | Α | D | - | Α | Α | A/150 | - | Α | A/212 | D | - | Α | В |
| FREON 114 | D | Α | Α | Α | С | Α | Α | Α | D | - | - | - | A/150 | - | Α | A/212 | D | - | Α | - |
| FREON 115 | D | - | Α | Α | Α | В | Α | Α | D | - | - | - | - | - | Α | - | - | - | - | - |
| FREON 142B | D | - | Α | Α | Α | D | Α | Α | D | - | - | - | - | - | Α | - | - | - | - | - |
| FREON 152A | D | - | Α | Α | Α | D | Α | Α | D | - | - | - | - | - | Α | - | - | - | - | - |
| FREON 218 | D | - | Α | Α | Α | Α | Α | Α | D | - | - | - | - | - | Α | - | - | - | - | - |
| FREON C316 | D | - | Α | Α | Α | Α | Α | Α | D | - | - | - | - | - | Α | - | - | - | - | - |
| ======= | D | - | Α | Α | Α | Α | Α | Α | D | - | - | - | _ | - | Α | - | - | - | - | - |
| FREON C318 | U | | / \ | | <u> </u> | | | | | | | _ | | | | | | | | - |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | E | AST | OME | RS | | | | | MET | ALS | | | | P | LASTIC | cs | | |
|--|------------------------|--------------|----------|--------|--------|--------|---------|---------------|----------|-----------|-------------------|---------|---------------------|------------|----------------------------|----------------|---------------|--------------|---------------|--------|
| | | | | | | | | | | | (316) | | ATED | | CETAL (CFA) | | | | | |
| | WIL-FLEX TM | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX™ TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (| ALLOY C | HALAR® ECTFE COATED | NYLON | CARBON-FILLED ACETAL (CFA) | ETE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| FREON 114B2 | D | - | A | В | D | В | A | A | D | - | - | - | - | - | A | - | - | - | - | - |
| FREON 502 | D | - | Α | В | - | В | Α | Α | D | - | - | - | - | - | Α | - | - | - | - | - |
| FREON TF | D | Α | Α | Α | D | В | Α | Α | D | Α | Α | Α | - | D | Α | - | - | - | В | В |
| FREON T-WD602 | D | Α | В | В | В | Α | Α | Α | D | - | - | - | - | - | - | - | - | - | - | - |
| FREON TMC | D | В | В | В | В | Α | Α | Α | D | - | - | - | - | - | - | - | - | - | - | - |
| FREON T-P35 | D | Α | Α | Α | Α | Α | Α | Α | D | - | - | - | - | - | - | - | - | - | - | - |
| FREON TA | D | Α | Α | Α | Α | С | Α | Α | D | - | - | - | - | - | - | - | - | - | - | - |
| FREON TC | D | Α | Α | Α | В | Α | Α | Α | D | - | - | - | - | - | - | - | - | - | - | - |
| FREON MF | D | С | С | Α | - | - | Α | Α | D | - | - | - | - | - | - | - | - | - | - | - |
| FREON BF | D | - | В | В | - | - | Α | Α | D | - | - | - | - | - | - | - | - | - | - | - |
| FRUIT JUICE | Α | - | - | Α | - | Α | Α | - | В | D | Α | Α | A/150 | Α | D | - | Α | А | Α | Α |
| FUEL OIL | C | В | В | A | D | A | Α | - | Α | Α | Α | Α | A | B/70 | Α | A/250 | С | В | Α | Α |
| FUMARIC ACID | A | - | В | C | - | A | A | - | - | - | - | - | - | - | - | | - | - | - | - |
| FURAN, FURFURAN | C | - | D | D | D | C | A | - | - A | - | - | - D | - | - | - | A/212 | C | - D | - | - A |
| FURAN RESIN | C | - D | D | D | D | A | A | - | A | - D | A | В | - A /200 | - n | D | - A /010 | C | D | D (120 | A |
| FURFURAL GALLIC ACID | C B | D D | D C | D | B | D A | A | - | A | B D | A B | B | A/200 A/150 | B P /70 | - A | A/212 A/212 | D A | D A | B/120 A/70 | D B |
| GASOLINE - LEADED | С | С | D | A | D | A | A | - A | A | A | А | А | A/ 150 | B/70 A | A | A/250 | D | - A | A/70 | В |
| GASOLINE - LEADED GASOLINE - UNLEADED | C | D | D | D | D | A | A | - A | A | A | A | A | A | A | A | A/250 | D | - | C | С |
| GELATINE | A | A | A | A | A | A | A | - | A | D | A | A | A/250 | B/70 | В | - Ay 2.30 | A | A/120 | A | В |
| GLUCOSE | A | Α | Α | A | A | A | A | - | A | В | A | A | A A | B/70 | A | - | A | A/120 | A | A |
| GLUE P.V.A. | Α | Α | Α | D | В | Α | Α | Α | В | A | Α | Α | - | A/70 | Α | - | В | A/70 | Α | С |
| GLYCERINE | Α | Α | Α | Α | Α | Α | Α | Α | Α | В | Α | Α | А | A/70 | Α | A/250 | Α | A/70 | Α | Α |
| GLYCOLIC ACID | Α | - | Α | Α | - | Α | - | - | - | - | - | Α | A/150 | - | Α | A/250 | A/70 | A/120 | A/70 | В |
| GLYCOLS | Α | В | Α | А | Α | Α | Α | - | В | В | В | - | А | B/70 | D | A/250 | А | - | Α | - |
| GOLD MONOCYANIDE | Α | - | Α | Α | - | Α | - | - | - | D | Α | - | - | - | Α | - | - | - | - | - |
| GRAPE JUICE | Α | - | Α | Α | - | Α | - | - | В | D | Α | - | - | Α | В | - | Α | В | Α | Α |
| GREASE | В | - | D | Α | D | Α | Α | - | Α | Α | Α | Α | - | - | Α | - | - | - | Α | Α |
| GREEN SULFATE LIQUOR | Α | Α | Α | Α | Α | Α | Α | - | - | - | - | - | - | - | - | - | Α | - | - | - |
| HALOWAX OIL | D | - | D | D | D | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| HEPTANE | C | В | В | A | - | A | A | - | A | A | A | A | A | A | A | A/250 | C/170 | B/70 | A | C |
| HEXANE | C | В | В | A | D | A | A | Α | A | A | A | Α | A | B/70 | Α | A/250 | C/170 | D | A | В |
| N-HEXALDEHYDE N-HEXENE-1 | C | B A | A B | D A | B D | C | A | - | Α | Α | Α | - | - | - | - | - | - | - | - | - |
| HONEY | A | - A | А | A | - | A | - A | - | - A | A | A | A | - | A/70 | A | - | A | В | A | A |
| HYDRAULIC OILS (PETROLEUM) | D | A | В | A | C | A | A | - | A | A | A | A | A/100 | A/70 | A | | D | C | - | A |
| HYDRAULIC OILS (SYNTHETIC) | D | - | - | C | - | A | - | - | A | A | A | A | A/100 | A | A | - | D | A | - | A |
| HYDRAZINE | A | D | В | В | А | Α | Α | D | - | C | A | - | - | - | В | A/100 | A/70 | - | A/120 | - |
| HYDROBROMIC ACID | В | D | D | D | A | A | A | - | D | D | D | D | A | D | D | A/250 | В | B/70 | A A | А |
| HYDROCHLORIC ACID (20%) | A | В | D | C | A | A | A | В | D | D | D | D | A/200 | D | D | A/250 | A | A/120 | A | A |
| HYDROCHLORIC ACID (37%) (HOT) | С | С | D | D | С | Α | Α | D | D | D | D | D | - | D | D | A/250 | - | B/120 | Α | - |
| HYDROCHLORIC ACID (37%) (COLD) | В | С | D | С | В | Α | Α | D | D | D | D | D | - | D | D | A/250 | Α | B/120 | Α | - |
| HYDROCYANIC ACID | В | С | В | С | В | Α | Α | С | Α | D | Α | D | Α | - | D | A/250 | Α | A/120 | Α | В |
| HYDROFLUORIC ACID (20%) | С | - | С | D | - | Α | Α | D | D | D | D | D | A/250 | D | D | A/250 | A/120 | A/120 | Α | В |
| HYDROFLUORIC ACID (50%) | D | D | С | D | Α | Α | Α | D | D | D | D | D | A/250 | D | D | A/250 | A/120 | A/70 | А | В |
| HYDROFLUORIC ACID (75%) | D | - | D | D | С | Α | Α | D | D | D | D | D | - | D | D | A/250 | C/70 | C/70 | Α | С |
| HYDROFLUORIC ACID (CONC-) (HOT) | D | D | D | D | - | В | Α | D | D | D | D | D | - | D | D | A/212 | D | D | Α | - |
| HYDROFLUORIC ACID (CONC-) (COLD) | D | D | В | D | - | A | Α | D | D | D | D | D | - | D | D | A/250 | D | D | A | - |
| HYDROFLUOSILICIC ACID (20%) | В | В | В | В | В | Α | Α | - | D | D | D | В | - | D | - | - | Α | B/120 | Α | Α |
| HYDROGEN FLUORIDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - D/400 | - | A/250 | - | - | - | - |
| HYDROGEN BEROYIDE | A | A | A | A | В | A | A | Α | A | A | A | A | A /150 | B/120 | - | A/250 | A 70 | A/120 | A /70 | A |
| HYDROGEN PEROXIDE | Α | С | D | В | С | Α | Α | - | Α | D | Α | Α | A/150 | D | D | - | A/70 | C/120 | A/70 | Α |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | El | AST | OME | RS | | | | | MET | ALS | | | | Р | LASTIC | cs | | |
|-----------------------------------|------------------------|--------------|----------|--------|--------|--------|---------|---------------|----------|-----------|-----------------------|---------|---------------------|---------|----------------------------|----------------|---------------|--------------|--------|-----|
| | | | | | | | | | | | | | | | (CFA) | | | | | |
| | WIL-FLEX TM | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX™ TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NATON | CARBON-FILLED ACETAL (CFA) | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| HYDROGEN PEROXIDE (5%) | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| HYDROGEN PEROXIDE (50%) | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/140 | - | - | - | - |
| HYDROGEN PEROXIDE (90%) | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/140 | - | - | - | - |
| HYDROGEN SULFIDE (WET) (COLD) | Α | В | В | С | Α | Α | Α | Α | D | D | Α | Α | - | С | D | A/250 | Α | A | Α | - |
| HYDROGEN SULFIDE (WET) (HOT) | Α | - | С | D | Α | В | Α | Α | D | D | Α | Α | - | D | D | A/250 | A | A | Α | - |
| HYDROGEN SULFIDE AQUEOUS SOLUTION | Α | - | В | С | A | D | Α | - | D | D | Α | Α | A/150 | - | С | - | A | A | A | В |
| HYDROQUINONE | A | - | D | С | - | С | Α | - | Α | В | В | В | A/250 | - | Α | - | A | A | А | В |
| HYDROXYACETIC ACID (70%) | A | - | Α | Α | - | Α | Α | - | D | В | - | - | - | - | С | - | - | - | - | D |
| HYPOCHLOROUS ACID | A | - | D | D | В | A | Α | - | D | D | D | - | А | - | D | A/250 | A | - | A | - |
| INK | A | - | - | A | - | A | - | - | С | D | A | - | - 4/150 | C | A | - 4 (050 | - | - | A (450 | C |
| IODINE (IN ALCOHOL) | A | D | D | В | D | A | Α | - | D | D | D | В | A/150 | С | Α | A/250 | A/70 | В | A/150 | Α |
| IODINE PENTAFLUORIDE | В | D | D | D | D | D | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| IODOFORM | В | - | - | D | A | - | Α | - | В | Α | В | D | - | - | - | - | - | - | A | A |
| ISOBUTYL ALCOHOL | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| ISOOCTANE | C | В | В | A | D | A | Α | Α | Α | - | - | - | A/73 | B/70 | - | A/140 | A | В | - | A |
| ISOTANE | D | - | - | A | - | A | - | - | A | - | - | - | - | D | - | - | B/72 | - | Α | A |
| ISOPHORONE | В | В | D | D | C | D | A | - | A | В | A | - | - | - | - | - | - | - | - | - |
| ISOPROPYL ACETATE | В | A | D | D | В | D | A | - | С | - | В | В | - | B/70 | A | A/140 | - | B/70 | - | D |
| ISOPROPYL CHLORIDE | C | D | D | D | D | В | A | - | D | Α | A | - | - 4.770 | - 4.770 | A | - | D | - | - | - |
| ISOPROPYL ETHER | C | В | D | В | D | D | A | - | A | - | A | A | A/73 | A/70 | A | - A /010 | B/72 | В | - | В |
| JET FUEL (JP3, JP4, JP5) KEROSENE | C | C | D | A | D D | A | A | A B | Α | A | A | A B | A | A/70 | A | A/212 | D | D 0.770 | A | C |
| KETONES | C | A | B D | A D | В | A D | A | В | A B | _ A | A | A | A/200 | A/120 | A | A/250 A/212 | B/72 D | C/70 C/70 | A/70 | D D |
| LACQUERS | C | D | D | D | D | D | A | D | А | C | A | A | A/70 | A/70 | A | AVZIZ | C | A | D D | D |
| LACQUER SOLVENTS | C | D | D | D | D | D | A | В | A | В | A | - A | A/70 A/70 | A/70 | A | - | C | A | D | D |
| LACTIC ACID | A | - | С | В | В | A | A | В | C | D | A | В | A/300 | C | A | A/250 | A | A/70 | A/70 | В |
| LARD | В | A | В | A | C | A | A | A | A | A | A | A | A/300 | A/70 | A | A/250 | A | A | A | A |
| LATEX - WATER BASE | A | - | В | A | - | A | A | - | A | - | A | - | - | A/70 | A | | A | - | - | - |
| LAVENDER OIL | В | D | С | В | С | В | A | - | - | - | - | - | _ | - | - | - | - | | - | - |
| LEAD ACETATE | A | D | В | В | A | D | A | - | D | Α | В | В | А | B/70 | В | A/250 | A | A/120 | Α | В |
| LEAD NITRATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/140 | - | | - | - |
| LEAD SULFAMATE | A | - | Α | В | Α | Α | Α | - | С | - | - | - | - | B/70 | Α | - | Α | A/70 | Α | В |
| LIGROIN | В | В | В | Α | D | Α | Α | - | D | - | Α | - | - | D | В | - | B/175 | A | Α | - |
| LIME | Α | - | В | Α | Α | Α | Α | - | С | Α | Α | - | - | B/70 | В | A/250 | - | Α | Α | В |
| LIME BLEACH | Α | - | В | Α | Α | Α | Α | - | D | - | Α | - | - | - | - | - | В | - | - | - |
| LIME SULFUR | В | - | Α | D | С | Α | Α | - | - | - | Α | - | A/150 | B/70 | - | A/250 | Α | - | - | - |
| LINDOL | Α | С | С | D | Α | В | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| LINOLEIC ACID | В | - | D | В | D | Α | Α | - | Α | D | Α | - | - | - | - | A/250 | A/70 | Α | Α | Α |
| LIQUEFIED PETROLEUM GAS | С | Α | В | Α | D | Α | Α | - | - | - | - | Α | - | - | Α | - | D | - | - | - |
| LUBRICANTS | В | В | В | Α | D | Α | Α | - | Α | Α | Α | - | - | A/70 | Α | - | В | D | Α | В |
| LUBRICATING OILS (PETROLEUM) | D | В | В | Α | D | Α | Α | Α | Α | Α | Α | - | А | A/70 | Α | A/250 | В | - | Α | - |
| LYE | Α | С | В | С | В | В | Α | - | - | - | Α | - | - | A/70 | - | - | А | - | A/150 | В |
| MAGNESIUM CARBONATE | Α | - | Α | Α | С | - | Α | - | D | - | Α | В | А | - | Α | A/250 | Α | В | Α | В |
| MAGNESIUM CHLORIDE | Α | Α | Α | Α | Α | Α | Α | D | D | D | D | Α | А | A/70 | Α | A/250 | А | A/70 | Α | В |
| MAGNESIUM HYDROXIDE | Α | Α | В | В | Α | Α | Α | D | D | В | Α | Α | А | B/70 | Α | A/250 | Α | A/120 | Α | Α |
| MAGNESIUM NITRATE | Α | - | Α | Α | Α | - | Α | D | D | D | Α | Α | А | A/70 | Α | A/250 | Α | A/120 | Α | Α |
| MAGNESIUM OXIDE | Α | - | Α | Α | - | - | Α | D | В | Α | Α | - | - | - | Α | - | - | - | - | - |
| MAGNESIUM SULFATE | Α | - | Α | Α | Α | Α | Α | D | D | С | Α | В | А | A/70 | Α | A/250 | В | A/120 | Α | Α |
| MALEIC ACID | Α | - | D | D | С | Α | Α | - | В | Α | Α | В | A/250 | B/70 | Α | - | Α | B/120 | Α | Α |
| MALEIC ANHYDRIDE | Α | - | D | D | С | Α | Α | - | Α | - | - | Α | - | - | Α | - | - | D | Α | - |
| MALIC ACID | Α | - | С | В | D | Α | Α | - | В | D | Α | В | A/250 | C/70 | Α | A/250 | В | B/120 | Α | Α |
| MASH | A | 1 - | Α | A | I - | - | - | I - | A | - | Α | - | - | A | Α | - | - | A | - | - |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | 3 | AST. | OME | RS | | | | | MET | ALS | | | | P | LASTIC | S | | |
|---|-----------|--------------|----------|--------|--------|--------|---------|---------------|----------|-----------|-----------------------|---------|---------------------|-----------|----------------------------|----------------|---------------|--------------|--------|--------|
| SHEMIONEO | | | | | | | | | | | | | | | (FA) | | | | | |
| | WIL-FLEX™ | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX™ TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NYLON | CARBON-FILLED ACETAL (CFA) | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | DVC |
| MAYONNAISE | Α | - | - | Α | - | Α | - | Α | D | D | Α | Α | - | Α | Α | - | Α | D | Α | D |
| MELAMINE | В | - | - | С | - | - | - | - | - | D | D | - | - | Α | Α | - | - | - | - | D |
| MERCURIC CHLORIDE (DILUTE SOLUTION) | Α | - | Α | Α | Α | Α | Α | В | D | D | D | В | A/250 | D | В | A/250 | Α | Α | Α | Α |
| MERCURIC CYANIDE | Α | - | Α | Α | Α | - | Α | - | D | С | Α | Α | A/250 | Α | - | A/250 | А | Α | Α | Α |
| MERCUROUS NITRATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| MERCURY | Α | Α | Α | Α | Α | Α | Α | Α | С | Α | Α | Α | А | A/120 | Α | A/250 | A | A | Α | Α |
| MESITYL OXIDE | С | D | D | D | В | D | Α | - | Α | Α | Α | - | - | - | - | - | - | - | - | - |
| METHANE | С | В | В | Α | D | Α | Α | - | A | - | Α | Α | A/250 | A/120 | Α | A/250 | В | - | Α | В |
| METHANOL (SEE ALCOHOL METHYL) | A | D | A | A | В | C | A | - | В | A | A | A | A/70 | B/70 | A | A/250 | A/120 | A/70 | A | A |
| METHYL ACETATE | В | D | В | D | A | D | A | - | Α | A | Α | Α | - | A/120 | Α | - | С | B/70 | В | D |
| METHYL ACETONIE | B | - | B D | D D | В | D - | A | - | - ^ | A | - | - | - | - A | Α | - | - D | - | B D | - D |
| METHYL ACETONE METHYL BROMIDE | D | - | D | В | - A | A | A | - | A D | A | Α - | - | - Λ | A C | Α | - A /2E0 | | - C/70 | | D |
| METHYL BROWIDE METHYL BUTYL KETONE | C | D | D | D | A B | D | A | | A | - A | A | - | A | D | A | A/250 | D D | C/70 - | A D | A |
| METHYL CELLOSOLVE | В | D | D | D | В | D | A | - | A | C | - A | | A | С | A | A/250 | В | - | A | D |
| METHYL CHLORIDE | D | D | D | D | C | A | A | _ | D | D | Α | В | A | C | A | A/250 | D | C/70 | A | D |
| METHYL CYCLOPENTANE | C | D | C | В | D | A | A | _ | - | - | - | - | - | - | A | | - | - | - | - |
| METHYL DICHLORIDE | D | D | D | D | - | Α | - | - | D | - | - | - | - | С | Α | - | D | - | D | Α |
| METHYL ETHYL KETONE | В | D | D | D | Α | D | Α | В | A | Α | Α | Α | A/150 | A/70 | Α | A/250 | C | B/120 | D | D |
| METHYL FORMATE | В | D | В | D | Α | D | Α | - | Α | В | В | - | - | - | Α | - | - | - | - | - |
| METHYL ISOBUTYL KETONE | С | D | D | D | В | D | Α | - | В | С | Α | Α | A/150 | A/70 | Α | - | B/72 | С | D | D |
| METHYL ISOPROPYL KETONE | С | - | D | D | С | D | Α | - | Α | С | Α | - | - | D | Α | A/250 | С | D | - | D |
| METHYL METHACRYLATE | В | - | D | D | С | D | Α | - | - | С | - | - | A/73 | - | Α | - | А | - | В | Α |
| METHYL OLEATE | С | - | D | D | С | В | Α | - | - | - | - | - | - | - | Α | - | - | - | - | - |
| METHYL SALICYLATE | В | - | D | D | С | В | Α | - | Α | Α | - | - | - | - | Α | - | В | - | В | - |
| METHYLACRYLIC ACID | Α | - | В | - | В | В | Α | - | - | - | - | - | - | - | Α | - | - | - | - | - |
| METHYLAMINE | Α | - | - | В | Α | - | Α | - | - | Α | Α | - | - | - | Α | - | - | A/70 | С | D |
| METHYLENE CHLORIDE | D | D | D | D | С | В | Α | D | D | В | Α | Α | A/73 | - | Α | A/212 | D | D | D | D |
| MILK | A | - | Α | A | A | Α | Α | - | Α | D | Α | Α | A/250 | A/120 | Α | - | A | A | Α | Α |
| MOLASSES | A | D | Α | Α | A | Α | Α | - | Α | Α | Α | Α | A/150 | A/70 | Α | - 1/040 | A | A | Α | Α |
| MONOBROMOROBENZENE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| MONOCHLOROACETIC ACID MONOCHLOROBENZENE | - C | - D | - D | - D | - D | - | - A | - | - D | - | - | - | - A/100 | - B/70 | - A | A/212 A/250 | - D | - | A/150 | - |
| MONOMETHYL ANILINE | В | - U | D | D | D | C | A | - | | A | A | - | A/100 | B//U | В | A/250 | C | - | A/ 150 | - |
| MONOETHANOLAMINE | A | С | С | В | В | C | A | - | В | A | A | | - | A | D | A/140 | D | C | D | D |
| MONOMETHYLETHER | C | - | В | A | A | A | A | - | - | - | - | | - | - | - | -y 140 | - | - | - | - |
| MONOVINYL ACETYLENE | C | - | В | A | A | A | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| MUSTARD | A | - | C | В | - | Α | - | - | В | С | Α | А | - | A/70 | В | - | Α | А | Α | - |
| NAPTHA | C | С | D | В | D | Α | Α | Α | A | В | A | В | А | A/70 | A | A/250 | C | A/70 | A | Α |
| NAPTHALENE | С | В | D | D | D | Α | Α | В | В | В | В | Α | A/150 | A/70 | Α | A/250 | A/70 | С | Α | D |
| NAPTHENIC ACID | В | - | - | В | D | Α | Α | - | В | В | Α | Α | - | - | Α | - | - | - | - | - |
| NATURAL GAS | С | В | Α | Α | С | Α | Α | - | Α | Α | Α | - | A/150 | - | Α | A/250 | Α | Α | - | Α |
| NEATSFOOT OIL | В | - | - | Α | В | Α | Α | - | Α | Α | Α | - | - | - | В | - | - | - | - | - |
| NEVILLE ACID | Α | - | С | С | В | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| NICKEL ACETATE | Α | - | В | В | Α | Α | Α | - | D | - | - | - | A/73 | - | - | - | - | - | - | - |
| NICKEL CHLORIDE | Α | - | Α | Α | Α | Α | Α | - | D | D | Α | - | А | С | Α | A/250 | А | А | А | Α |
| NICKEL NITRATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| NICKEL SULFATE | Α | Α | Α | Α | Α | Α | Α | - | D | D | Α | В | А | A/70 | Α | A/250 | A | А | А | Α |
| NITER CAKE | A | - | Α | A | A | A | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| NITRIC ACID (5-10% SOLUTION) | A | С | D | D | В | A | Α | В | D | D | A | A | Α | C | С | B/212 | A/120 | В | A/120 | A |
| NITRIC ACID (20% SOLUTION) | В | С | D | D | В | A | A | D | D | D | A | A | - A (4.50 | D | С | B/212 | B/70 | C | A | A |
| NITRIC ACID (50% SOLUTION) | C | С | D | D | D | Α | Α | D | С | D | Α | Α | A/150 | D | С | B/212 | B/70 | B/70 | Α | В |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | | лет | OME | DC | | | | | MI | A I C - | | | | | LASTIC | | | |
|-------------------------------------|------------------|--------------|----------|----------|----------------|--------|---------|----------------------------|----------|-----------|-----------------------|---------|---------------------|---------------|----------------------------|-----------|---------------|--------------|--------|----------|
| CHEMICALS | | | 3 | AST | JME | ίδ | | | | | MET | ALS | | | | r | LASTIC | 55 | | |
| | WIL-FLEX™ | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX TM TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NYLON | CARBON-FILLED ACETAL (CFA) | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| NITRIC ACID (CONCENTRATED SOLUTION) | C | D | D | D | D | Α | A | D | A/120 | - | A | В | A/150 | | С | - | D | C/70 | A/125 | В |
| NITRIC ACID - RED FUMING | D | D | D | D | D | В | A | D | A/B | D | Α | - | | D | С | - | D | - | D D | - |
| NITROBENZENE | В | - | D | D | C | В | Α | D | C | С | В | В | A/150 | B/70 | В | A/250 | B/72 | C/70 | A/70 | D |
| NITROBENZINE | В | - | D | - | C | A | A | - | - | - | - | - | - | - | В | - | - | - | A | - |
| NITRO ETHANE | A | - | C | D | В | C | A | - | А | А | Α | - | _ | - | В | - | С | - | - | - |
| NITROMETHANE | A | - | C | D | A | C | A | - | A | A | Α | Α | A/200 | B/70 | В | A/212 | C | А | A/120 | В |
| NITROUS ACID | | - | - | - | - | - | - | <u> </u> | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| NITROUS OXIDE | - - | - | - | - | - | - | - | - | - | - | - | - | _ | - | - | A/212 | - | - | - | - |
| NITROGEN (GAS) | A | Α | Α | А | A | Α | Α | - | А | А | Α | А | Α | | Α | - | A | - | А | - |
| NITROGEN TETROXIDE | D | - | D | D | C | C | A | | D | D | - | - | - | - | - | - | D | - | C | - |
| OCTADECANE | В | A | В | A | D | A | A | - | - | - | - | - | - | - | - | - | - | - | - | - |
| OCTANE | | - | - | - | - | - | - | - | - | - | - | - | _ | - | - | A/250 | - | - | - | - |
| N-OCTANE | В | - | | A | D | A | A | | - | - | - | - | - | | _ | - Ay 2,30 | D | - | A | - |
| OCTACHLOROTOLUENE | D | D | D | D | D | A | A | - | D | - | - | - | _ | | - | - | D | - | - | - |
| OILS | - - | | 1 | - | | | | | - | | | | | | | - | , b | | | |
| ANILINE | В | С | D | D | В | Α | Α | <u> </u> | С | Α | Α | В | _ | A | D | - | A | - | A/70 | D |
| ANISE | C | - | D | - | - | - | A | - | - | A | A | - | _ | - | D | - | - | - | - | - |
| BAY | C | - | D | - | - | A | - | - | - | <u> </u> | A | - | - | | D | - | - | - | A | - |
| BONE | C | - | D | A | - | A | A | - | - | A | A | - | - | - | D | - | - | - | A | - |
| CASTOR | В | A | A | A | В | A | A | В | A | A | A | - | - | A | A | - | - | - | A | A |
| CINNAMON | C | - A | D | - A | _ D | - A | - A | _ D | - A | - A | A | - | - | - A | D | - | - | | - A | D |
| CITRIC | C | - | D | A | В | A | A | - | A | D | A | A | A | | A | - | A | A | A | В |
| CLOVE | C | - | - | A | - D | - A | - A | - | В | - | A | A | - A | - | В | - | В | - A | - A | _ D |
| COCONUT | В | A | A | A | A | A | A | - | В | A | A | A | _ | | A | - | A | A | A | A |
| COD LIVER | C | A | В | A | A | A | A | - | В | - | A | A | - | | A | - | A | _ A | A | A |
| CORN | В | A | D | A | C | A | A | - | В | A | A | A | A | - | A | - | A | A | A | В |
| COTTON SEED | В | A | D | A | A | A | A | A | В | A | A | A | - A | A | A | - | A | A | A | В |
| CREOSOTE | В | - A | В | A | D | A | A | _ A | А | - A | A | В | - | D | В | - | D | C | - A | С |
| DIESEL FUEL (20, 30, 40, 50) | C | - | D | A | - | A | - A | A | _ | - | A | В | - | A | А | - | B/70 | A | | В |
| FUEL (1, 2, 3, 5A, 5B, 6) | C | - | D | В | D | A | A | - A | A | A | A | A | - | A/70 | A | - | B/70 | В | A A | А |
| GINGER | C | - | A | A | - U | A | - A | | _ A | - A | A | - A | - | Ay 70 | A | - | B//U | _ D | A | - A |
| HYDRAULIC (SEE HYDRAULIC) | | - | A | A | - | A | - | <u> </u> | - | - | A | - | - | - | A | - | - | - | А | - |
| LEMON | C | - | D | - | - | А | - | - | A | - | А | - | _ | _ | Α | - | D | _ | ٨ | - |
| LINSEED | В | В | D | A | В | A | A | D | A | A | | В | - | A/70 | A | A/250 | A | A | A | A |
| MINERAL | C | A | В | A | D | A | A | - | A | A | A | A | - | A | A | A/250 | В | B/70 | A | В |
| OLIVE | В | | В | | _ | _ | | - | | | | | | | | | | | | С |
| ORANGE | C | - A | D | A | A - | A | - A | - | A | - A | A | A | - | A/70 - | A | - | A | A/70 C/70 | - A | C |
| PALM | В | - | D | A | - | A | A | - | A | A | A | - A | - | - | A | - | - A | A | A | A |
| PEANUT | В | В | D | A | C | A | A | - | A | A | A | - | - | - | A | - | B/175 | A | A | A |
| PEPPERMINT | C | - D | D | D | - | A | - A | - | D | - A | A | - | - | - | A | - | B/175 | - A | A | _ A |
| PINE | C | - | D | A | D | A | A | - | A | C | A | - | - | A | A | - | D/173 | | A | D |
| RAPE SEED | В | В | D | В | A | A | A | - | - A | A | A | - | - | - A | A | - | - | D | A | - |
| ROSIN | A | - D | - | A | - A | A | A | - | - A | - A | A | A | - | A/70 | A | - | A | B/120 | A | C |
| SESAME SEED | B | <u> </u> | D | A | - | A | - A | - | A | A | A | - A | - | <i>H</i> y /U | A | - | - A | D/ 120 | A | A |
| SILICONE | C | A | A | A | A | 1 | A | - | A | A | A | A | | A/70 | A | - | | A | A | |
| | В | В | D | _ | В | A | - | D | _ | - | | | - | | | | Α | | | Α |
| SOYBEAN SPERM | В | - В | D | A | - B | A | _ A | - U | _ A | A | A | A | - | B/70 - | Α | - | A . | A/70 | A | _ A |
| TANNING | В | | D | Α | | A | - | - | | Α | A | | | | Α | | | - | A | |
| TURBINE | _ | - | _ | Α | - D | A | - A | - | - ^ | - Λ | Α | - | - | - | Α | - | - D/70 | - C | A | - ^ |
| OLEIC ACID | C B | | D | A B | D | A | A | _ | A | A | A | | | | Α | | B/70 | C/120 | A | C |
| OLEUM | D | В | - | C | В | В | A | A | B D | C | A | A | A/250 | B/120 | A D | A/250 | B D | C/120 | A D | _ |
| | _ | D | D | <u> </u> | D | A | A | D | _ | D | A | D | A/73 | D | | - | _ | D | | D |
| OLEUM SPIRITS | D | С | D | C | C | Α | Α | D | D | D | В | - | - | - | - | - | D | D | D | - |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | E | AST | OME | RS | | | | | MET | ALS_ | | | | P | LASTIC | s | | |
|---|------------------------|--------------|----------|--------|--------|--------|---------|---------------|----------|-----------|-----------------------|---------|---------------------|-------|----------------------------|----------------|---------------|--------------|-------|--------|
| - SHEMIONES | | | | | | | | | | | -1 / | _, | | | CFA) | | | | | |
| | WIL-FLEX TM | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX™ TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NYLON | CARBON-FILLED ACETAL (CFA) | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | ງ |
| | _ | | | _ | - | - | _ | _ | _ | - | ST | _ | Ť | ź | - | | | PC | ₹ | PVC |
| O-DICHLOROBENZENE | D | D | D | D | Α | Α | - | D | Α | Α | - | - | - | - | Α | - | D | - | - | - |
| OXALIC ACID (COLD) | A | - | В | В | A | A | Α | - | C | D | A | В | A/150 | B/120 | В | A/250 | A/70 | A/120 | A/120 | В |
| OXGEN - COLD | A | A | A | C | В | A | A | - | Α | A | A | - | A | B/70 | С | A/250 | C | - | A | - |
| 0XYGEN - 200°-400°F | D | D | D | D | D | В | Α | - | A | Α | Α | - | - | D | D | - A /010 | D | - 0.70 | A | - D |
| OZONE PAINT THINNER, DUCO | C | A | B C | D | A D | A B | A | - | В | - | - A | - | A . | - | D | A/212 | D D | C/70 - | Α - | B - |
| PALMITIC ACID | В | D A | В | A | В | А | A | - A | C | C | A | В | A/250 | C | A | A/250 | A | - | A | - В |
| PARAFFIN | А | - A | - D | A | D | A | A | - A | A | - | A | В | A/150 | A/70 | A | AV Z 3 U | A | В | A | В |
| PENTANE | A | D | В | A | D | A | A | _ | A | | C | В | A/130 | A/70 | A | - | - | D | A | A |
| PERCHLORIC ACID | C | D | A | D | В | A | A | _ | D | D | D | В | A/200 | D D | C | - | А | В | A/120 | С |
| PERCHLORIC ACID-10% | - | - | - | - | - | - | - | - | - | - | - | - | - A/ Z00 | - | - | A/250 | - | - | | - |
| PERCHLORIC ACID-70% | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/140 | - | - | - | - |
| PERCHLOROETHYLENE | Α | D | D | С | D | Α | Α | D | D | В | Α | В | A/200 | D | Α | A/250 | B/72 | D | Α | С |
| PETROLATUM | В | - | В | Α | - | Α | - | - | В | - | Α | Α | - | D | Α | - | A | В | Α | В |
| PETROLEUM - BELOW 250 | В | В | В | Α | D | Α | Α | - | Α | Α | Α | - | А | Α | Α | A/250 | A/70 | C/70 | A/200 | - |
| PETROLEUM - ABOVE 250 | С | D | D | С | D | В | Α | - | Α | Α | Α | - | - | D | Α | A/250 | - | C/70 | - | - |
| PHENOL (CARBOLIC ACID) | Α | С | D | D | С | Α | Α | D | В | D | Α | Α | A/150 | С | А | A/212 | С | D | A/70 | D |
| PHENYLBENZENE | С | D | D | D | D | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| PHENYL ETHYL ETHER | С | D | D | D | D | С | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| PHENYL HYDRAZINE | В | D | D | D | С | Α | Α | - | - | - | - | - | A/73 | - | - | - | - | - | D | - |
| PHORONE | В | D | D | D | С | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| PHOSPHORIC ACID - 20% | Α | В | В | C | Α | Α | Α | - | D | D | В | Α | - | D | D | A/250 | A/120 | - | Α | - |
| PHOSPHORIC ACID (TO 40% SOLUTION) | A | В | D | D | В | Α | Α | - | D | D | A | Α | - | D | D | A/250 | A/120 | B/70 | A | - |
| PHOSPHORIC ACID - 45% | В | В | В | D | В | A | Α | - | D | D | В | - | - 1 | D | D | A/250 | A/120 | - | A | - |
| PHOSPHORIC ACID (40%-100% SOLUTION) | C | C | D | D | В | A | A | - | D | D | В | A | A/250 | C | D | A/250 | A/120 | - D/70 | A | В |
| PHOSPHORIC ACID CRUDE | C B | Α | D D | D D | C | A | A | - | D D | D B | C | A | - A /2E0 | С | D D | - A /2E0 | A/120 | B/70 B | A | В |
| PHOSPHOROUS TRICHLORIDE ACID PHOTOGRAPHIC (DEVELOPER) | A | - | A | A | A - | A | - A | - | С | D | A | A | A/250 | - | A | A/250 | D A | A | Α - | - A |
| PHTHALIC ACID | A | - | - A | _ A | - | А | - | - | - | - | А | - A | A/150 | - | A | A/250 A/212 | - A | A | - | - A |
| PHTHALIC ANHYDRIDE | | _ | - | - | - | - | - | _ | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| PICKLING SOLUTION | A | С | С | - | C | В | A | D | - | - | - | A | - | - | D | | - | - | - | _ |
| PICRIC ACID | В | В | В | В | В | A | A | - | С | D | D | D | A/73 | С | D | A/140 | B/70 | Α | A/70 | - |
| PINENE | C | В | D | В | D | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| PIPERIDINE | В | D | D | D | D | С | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| PLATING SOLUTIONS: | | | | | | | | | | | | | | | | | | | | |
| ANTIMONY | Α | - | Α | Α | - | Α | Α | - | D | Α | Α | Α | - | D | A/130 | - | Α | - | A/70 | Α |
| ARSENIC | Α | - | Α | Α | - | Α | Α | - | С | Α | Α | Α | - | Α | A/110 | | Α | - | - | Α |
| BRASS | Α | - | - | Α | - | Α | Α | - | С | Α | Α | Α | A/150 | Α | A/100 | A/250 | А | В | Α | Α |
| BRONZE | Α | - | Α | Α | - | Α | - | - | С | Α | Α | Α | - | Α | В | - | Α | - | - | - |
| CADMIUM | Α | - | Α | Α | - | Α | Α | - | С | - | - | D | A/150 | Α | С | A/250 | Α | - | Α | Α |
| CHROME | Α | - | D | D | Α | Α | Α | - | С | - | Α | D | A/150 | D | - | A/250 | А | - | Α | Α |
| COPPER | Α | - | - | Α | - | Α | Α | - | С | - | - | D | A/150 | Α | - | A/250 | Α | - | Α | - |
| GOLD | A | - | Α | A | - | Α | Α | - | С | - | A | - | A/150 | A/70 | - | A/250 | A | - | Α | - |
| INDIUM | Α | - | - | Α | - | A | - | - | C | - | A | A | - | D | - | - | A | - | - | A |
| IRON | A | - | A | A | - | A | Α | - | C | - | Α | Α | - A /1F0 | D | - | - | A | - | A | D |
| LEAD | A | - | _ A | A | - | A | Α | - | C | - | - | - | A/150 | D | - | - | A | - | A | A |
| NICKEL SILVER | A | - | - A | A | - | A | A | - | C | - | - A | - | A/150 A/150 | A/120 | - | - | A | - | A | D A |
| TIN | A | - | A | A | - | A | A | - | C | - | A | - | A/150 A/150 | A/120 | - | | A | | A | A |
| ZINC | A | - | A | A | - | A | A | - | C | - | A | - | A/150 A/150 | D | - | - | A | - | A | D |
| POLYVINYL ACETATE EMULSION | A | - | В | - | A | - | A | - | - | В | - | - | | - | A | - | B/70 | <u> </u> | A | |
| POTASH POTASH | A | В | В | A | В | A | A | - | C | В | A | В | A | A | A | A/250 | A | A/70 | A | A |
| IUINUII | A | ט | טן | _ A | טן | М | М | | U | טן | М | טו | _ A | _ A | Ι Α | ry ZJU | М | //y/U | М | М |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | El | AST | OME | RS | | | | | META | ALS | | | | Pi | LASTIC | cs | | |
|--------------------------------|-----------|--------------|----------|--------|--------|--------|---------|----------------------------|----------|-----------|-----------------------|---------|---------------------|--------------|----------------------------|----------------|---------------|--------------|-------|-----|
| | | | | | | | | | | | | | | | 2 | | | | | |
| | WIL-FLEX™ | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX TM TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NATON | CARBON-FILLED ACETAL (CFA) | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| POTASSIUM ACETATE | Α | D | В | В | Α | В | Α | - | D | Α | В | - | A/70 | - | Α | - | Α | - | Α | - |
| POTASSIUM ALUMINUM SULFATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| POTASSIUM BICARBONATE | Α | - | Α | Α | - | Α | Α | - | С | Α | В | В | - | A/70 | Α | A/250 | Α | Α | Α | Α |
| POTASSIUM BICHROMATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| POTASSIUM BROMIDE | Α | - | Α | Α | Α | Α | Α | - | С | D | Α | Α | А | A/70 | Α | A/250 | Α | А | Α | Α |
| POTASSIUM CARBONATE | Α | - | В | Α | Α | Α | Α | - | С | В | Α | В | Α | A/70 | Α | A/250 | Α | - | Α | - |
| POTASSIUM CHLORATE | Α | - | Α | Α | Α | Α | Α | - | В | С | Α | В | - | С | Α | A/250 | Α | A/70 | Α | Α |
| POTASSIUM CHLORIDE | Α | Α | Α | Α | Α | Α | Α | - | В | В | С | В | А | B/70 | Α | A/250 | Α | A/70 | Α | Α |
| POTASSIUM CHROMATE | Α | - | Α | Α | - | Α | Α | - | Α | Α | В | Α | Α | А | D | A/250 | Α | А | Α | Α |
| POTASSIUM CUPRO CYANIDE | Α | Α | Α | Α | Α | Α | Α | - | - | - | - | - | - | - | С | - | - | - | - | - |
| POTASSIUM CYANIDE SOLUTIONS | Α | Α | Α | Α | Α | Α | Α | - | D | В | Α | В | А | A/70 | С | A/250 | Α | - | Α | Α |
| POTASSIUM DICHROMATE | Α | Α | Α | Α | Α | Α | Α | D | Α | В | Α | В | А | D | D | A/250 | Α | Α | Α | Α |
| POTASSIUM HYDROXIDE | Α | В | В | В | В | D | Α | D | D | С | Α | В | A/150 | С | Α | A/250 | Α | А | A/150 | Α |
| POTASSIUM HYPOCHLORITE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| POTASSIUM IODIDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| POTASSIUM NITRATE | Α | Α | Α | Α | Α | Α | Α | - | В | Α | Α | В | А | B/70 | В | A/250 | Α | А | Α | Α |
| POTASSIUM PERMANGANATE | Α | - | Α | Α | Α | Α | Α | - | В | В | В | Α | - | D | С | A/250 | В | А | Α | Α |
| POTASSIUM SULFATE | Α | Α | Α | Α | Α | Α | Α | - | Α | В | В | В | А | A/70 | В | A/250 | Α | A/120 | Α | Α |
| POTASSIUM SULFIDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| PRODUCER GAS | С | Α | В | Α | С | Α | Α | - | - | - | - | - | - | - | Α | - | - | - | - | - |
| PROPANE (LIQUIFIED) | С | В | В | Α | D | Α | Α | - | Α | Α | Α | Α | А | A/70 | Α | A/250 | B/72 | C/70 | B/200 | Α |
| PROPYL ACETATE | В | D | D | D | С | D | Α | - | - | - | - | - | A/120 | - | Α | - | С | - | A/70 | - |
| PROPYL ALCOHOL | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| PROPYL NITRATE | В | - | - | - | В | С | Α | - | Α | D | - | - | - | - | Α | - | - | - | - | - |
| PROPYLENE | В | D | D | D | D | Α | Α | - | Α | Α | Α | - | - | - | Α | - | - | - | - | В |
| PROPYLENE GLYCOL | Α | - | С | Α | Α | Α | Α | - | Α | В | Α | В | - | - | D | A/100 | Α | B/70 | Α | С |
| PROPYLENE OXIDE | Α | D | D | - | В | - | Α | - | В | В | Α | - | D | - | Α | A/140 | С | - | D | - |
| PYRANOL | D | В | D | Α | D | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| PYDRAULS | D | D | D | D | В | Α | Α | Α | - | - | - | - | A/70 | A/70 | - | - | - | - | - | - |
| PYRIDINE | C | - | D | D | В | D | Α | D | В | Α | В | Α | D | С | В | A/250 | С | B/70 | D | D |
| PYROGALLIC ACID | Α | - | - | - | - | Α | - | - | - | D | Α | В | A/150 | - | D | A/140 | - | - | Α | Α |
| PYROLIGNEOUS ACID | В | - | С | С | В | Α | Α | - | D | С | В | - | A/100 | - | - | - | - | - | - | - |
| PYRROLE | C | В | D | D | С | С | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| RADIATION | Α | Α | В | В | С | В | Α | - | - | - | - | - | - | - | D | - | - | - | - | - |
| RED OIL | В | В | С | Α | В | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| ROSINS | Α | - | - | Α | - | - | Α | - | Α | D | Α | - | - | A/70 | В | - | Α | B/70 | - | С |
| RUM | Α | D | - | Α | Α | Α | Α | - | - | - | Α | - | - | Α | Α | - | A | - | - | Α |
| RUST INHIBITORS | В | - | С | Α | - | Α | - | - | - | C | Α | - | - | - | Α | - | A | - | - | - |
| SALAD DRESSING | Α | - | - | Α | - | Α | - | - | В | D | Α | - | - | Α | Α | - | А | - | - | - |
| SALICYLALDEHYDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| SALICYLIC ACID | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| SAL AMMONIAC | A | A | A | A | A | A | A | - | D | D | A | - | - A (050 | - A /4.00 | - | - | - | - A /4.00 | - | - |
| SEA WATER | A | Α | В | A | A | A | A | Α | D | D | С | - | A/250 | A/120 | Α | - 4 (050 | A | A/120 | A | Α |
| SEWAGE | A | D | Α | A | В | Α | Α | - | В | В | A | - | - | - | Α | A/250 | A | - A /70 | Α | - |
| SHELLAC (BLEACHED) | В | - | - | A | - | - | - | - | A | A | A | - | - | A/70 | A | - | A | A/70 | - | - |
| SHELLAC (ORANGE) | В | - | - | A | - | - | - | - | Α | Α | Α | - | - | A/70 | Α | - | А | A/70 | - | - |
| SILICATE ESTERS | В | Α | В | A | D | A | Α | - | - | - | - | - | - | - 4 (70 | - | - A /04.0 | - | - | - | - |
| SILICONE | В | - | A | A | - | A | - | - | В | Α | Α | - | - | A/70 | A | A/212 | А | - | Α | A |
| SILICONE GREASES | В | Α | Α | Α | Α | Α | Α | Α | - | - | - | - | - | - | A | - | - | - | - | - |
| SILVER BROMIDE | Α | - | - | - | - | - | - | - | D | D | В | Α | - | - | Α | - | - | A | - | - |
| OUL (ED OL) OD (DE | | | | | | | | | | | | | | | | | | | | |
| SILVER CHLORIDE SILVER CYANIDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 A/250 | - | - | - | - |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | ELASTOMERS | | | | | | | | MET | ALS | | PLASTICS | | | | | | | | |
|--------------------------------------|------------------------|--------------|----------|--------|--------|--------|---------|---------------|----------|-----------|-----------------------|----------|---------------------|---------|----------------------------|----------------|---------------|--------------|------|-----|
| - CHILLIONIE | | | | | | | | | | | 1 | | | | CFA) | | | | | |
| | WIL-FLEX TM | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX™ TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NYLON | CARBON-FILLED ACETAL (CFA) | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| SILVER NITRATE | A | А | A | C | A | A | A | - | D | D | A | A | A | A/70 | A | A/250 | A | A | A | A |
| SKYDROL 500 | В | D | D | D | A | C | A | A | - | - | - | - A | A/70 | C | A | - Ay 2,30 | - | - A | - | - A |
| SKYDROL 7000 | В | D | D | D | C | В | A | - | - | | - | - | A/70 A/70 | C | A | | - | - | | - |
| SOAP SOLUTIONS | A | A | В | A | A | A | Α | Α | С | В | А | А | A/150 | A/70 | Α | - | А | D | Α | А |
| SODA ASH (SEE SODIUM CARBONATE) | | | | | , · | | 7. | | | | | <u> </u> | 7,4,100 | 7,70 | | - | 7. | | | - |
| SODIUM ACETATE | Α | D | В | В | Α | D | Α | - | В | В | Α | Α | А | B/70 | Α | A/250 | Α | Α | Α | В |
| SODIUM ALUMINATE | Α | - | Α | Α | - | Α | Α | - | С | Α | Α | В | А | A/70 | Α | - | Α | - | Α | - |
| SODIUM BENZOATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| SODIUM BICARBONATE | Α | - | Α | Α | Α | Α | Α | - | Α | С | Α | В | А | Α | Α | A/250 | Α | A/120 | Α | А |
| SODIUM BICHROMATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| SODIUM BISULFATE | Α | - | Α | Α | Α | Α | Α | - | D | D | Α | В | Α | A/70 | Α | A/250 | Α | A/120 | А | Α |
| SODIUM BISULFITE | Α | - | Α | Α | Α | Α | Α | - | Α | D | Α | Α | Α | С | Α | A/250 | Α | A/120 | Α | Α |
| SODIUM BORATE | Α | - | Α | Α | Α | Α | Α | - | С | В | В | Α | А | A/70 | Α | A/250 | A/140 | A/120 | Α | Α |
| SODIUM BROMIDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| SODIUM CARBONATE | Α | - | Α | Α | Α | Α | Α | - | C | В | Α | Α | A | B/70 | Α | A/250 | Α | B/120 | Α | Α |
| SODIUM CHLORATE | Α | - | Α | Α | A | Α | Α | Α | В | - | A | A | Α | D | Α | A/250 | A | B/120 | A | A |
| SODIUM CHLORIDE | A | Α | A | A | Α | A | A | A | С | В | С | A | - | A/70 | Α | - | A | A/120 | A | Α |
| SODIUM CHROMATE | A | - | A | A | - | A | A | D | D | В | - | A | A | D A 770 | D | - A (050 | A | - A /4.00 | A | - |
| SODIUM CYANIDE | Α | - | Α | A | Α | Α | Α | - | D | В | Α | Α | - | A/70 | В | A/250 | A | A/120 | Α | Α |
| SODIUM DICHROMATE SODIUM FLUORIDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 A/250 | - | - | - | - |
| SODIUM HYDROXIDE (20%) | A | В | В | A | A | A | A | В | D | В | A | В | - | A | A | A/250 | A | D | A | A |
| SODIUM HYDROXIDE (50% SOLUTION) | A | В | С | D | A | A | A | В | D | C | В | A | A/250 | A | A | A/250 | A | D | C | A |
| SODIUM HYDROXIDE (80% SOLUTION) | A | В | С | D | A | В | A | - | D | C | D | В | - | C | A | A/140 | A | D | C | A |
| SODIUM HYPOCHLORITE (TO 20%) | Α | D | D | C | C | A | Α | D | D | D | С | A | А | D | D | A/250 | B/72 | A | A | A |
| SODIUM METAPHOSPHATE | Α | - | В | A | A | Α | Α | - | A | С | A | - | A | A/70 | В | - | D | A/70 | - | Α |
| SODIUM METASILICATE | Α | - | Α | Α | - | Α | - | - | В | Α | Α | Α | - | - | D | A/250 | - | - | - | Α |
| SODIUM NITRATE | Α | - | В | С | Α | Α | Α | - | Α | Α | Α | В | А | A/70 | Α | A/250 | Α | A/120 | Α | Α |
| SODIUM NITRITE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| SODIUM PERBORATE | Α | - | В | В | Α | Α | Α | - | В | С | С | В | - | B/70 | В | A/250 | Α | A/70 | Α | Α |
| SODIUM PEROXIDE | В | D | В | С | В | Α | Α | - | D | D | Α | В | Α | A/70 | С | A/250 | B/120 | А | Α | В |
| SODIUM PHOSPHATE | Α | Α | В | В | Α | Α | Α | - | D | В | В | - | А | A/70 | - | A/250 | Α | - | Α | - |
| SODIUM POLYPHOSPHATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - |
| (MONO, DI, TRIBASIC) | Α | Α | D | Α | - | Α | - | - | D | D | Α | Α | - | A/70 | В | - | Α | А | Α | Α |
| SODIUM SILICATE | Α | - | Α | Α | Α | Α | Α | - | С | В | Α | В | А | A/70 | С | A/250 | Α | A/120 | Α | Α |
| SODIUM SULFATE | Α | Α | Α | Α | Α | Α | Α | - | В | Α | Α | В | Α | A | В | A/250 | Α | A/120 | Α | Α |
| SODIUM SULFIDE | Α | Α | Α | Α | Α | Α | Α | - | D | Α | Α | В | А | A/70 | В | A/250 | Α | A/120 | Α | Α |
| SODIUM SULFITE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - 4 (4.00 | - | - |
| SODIUM TETRABORATE | A | - | - | A | A | A | A | - | С | - | A | - | A | A | В | - A /0F0 | - | A/120 | - | A |
| SODIUM THIOSULPHATE ("HYPO") SORGHUM | A | Α | Α | В | Α | A | Α | - | В | C | A | Α | A | B A | C | A/250 | A | A/70 | A | A _ |
| SOY SAUCE | A | - В | A | A | - В | A | - A | - | - A | A D | A | - | - | A | A | - | - | - | - | - |
| STANNIC CHLORIDE | A | В | D | A | В | A | A | C | D | D | D | - | A | В | В | A/250 | A | A/120 | A | A |
| STANNIC FLUOBORATE | A | - | A | A | - | A | - | - | D | D | - | 1 | - | - | С | - Ay 2,30 | - | - Ay 120 | - | _ A |
| STANNOUS CHLORIDE | - | - | - | - | - | - | - | - | - | - | - | - | _ | - | - | A/250 | - | - | | - |
| STARCH | Α | Α | Α | Α | А | Α | Α | - | Α | С | Α | - | A/150 | A/70 | Α | | - | В | - | А |
| STEAM TO 200°F | A | C | C | C | A | D | D | В | A | A | A | - | A) 130 | D | В | A/250 | - | - | - | - |
| STEAM 220°F-300°F | В | D | D | D | A | D | D | С | A | A | A | - | A | D | D | A/250 | - | - | - | - |
| STEARIC ACID | В | Α | В | С | В | Α | A | С | В | - | Α | Α | A/150 | A/120 | Α | A/250 | B/72 | B/72 | А | В |
| STODDARD SOLVENT | С | Α | В | В | D | Α | Α | - | Α | Α | Α | А | Α | Α | Α | A/250 | B/120 | C/120 | А | С |
| STYRENE | С | С | D | D | D | В | Α | D | Α | Α | Α | D | - | A/70 | Α | A/212 | D | - | В | D |
| SUCROSE SOLUTION | Α | D | Α | Α | Α | Α | Α | - | - | В | - | Α | - | Α | Α | - | - | - | - | - |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | E | AST | OME | RS | | | | | MET | ALS | | PLASTICS | | | | | | |
|---|------------------------|--------------|----------|--------|--------|--------|---------|---------------|----------|-----------|-----------------------|---------|---------------------|----------|----------------------------|-----------|---------------|--------------|-----------|-----|
| SHEIMONES | | | | | | | | | | | | | | | ~ | | | | | |
| | WIL-FLEX TM | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX™ TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NOTAN | CARBON-FILLED ACETAL (CFA) | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| SUGAR (LIQUIDS) | А | - | В | Α | - | Α | - | - | Α | - | Α | Α | - | A/70 | Α | - | Α | - | - | - |
| SULFATE LIQUORS | Α | - | С | - | - | - | - | - | В | С | С | Α | A/73 | B/70 | D | A/250 | Α | A/120 | Α | В |
| SULFITE LIQUORS | A | - | Α | Α | В | Α | Α | - | D | D | В | - | A/73 | - | - | A/250 | - | - | - | - |
| SULFUR | A | В | В | В | Α | Α | Α | С | D | В | Α | - | A/250 | A/70 | - | A/250 | Α | - | Α | - |
| SULFUR CHLORIDE | D | - | D | D | D | Α | Α | С | D | D | D | Α | A/73 | Α | D | A/140 | С | C/70 | A/70 | С |
| SULFUR DIOXIDE | A | - | В | D | Α | D | Α | D | D | D | Α | В | A/150 | С | D | A/250 | A/70 | B/70 | Α | Α |
| SULFUR HEXAFLUORIDE | В | - | В | В | Α | Α | Α | - | D | D | - | - | - | - | D | - | - | В | - | В |
| SULFUR TRIOXIDE | C | В | С | C | C | Α | Α | - | D | D | В | - | - | - | - | - | - | - | - | Α |
| SULFUR TRIOXIDE (DRY) | C | В | D | D | C | Α | Α | - | A | A | С | В | - | A/70 | D | - | D | C/70 | D | Α |
| SULFURIC ACID (DILUTE) | A | С | C | D | - | A | A | A | D | D | В | - | - 1/050 | C | D | A/250 | A | A/70 | A | - |
| SULFURIC ACID (TO 10%) | A | D | D | D | A | A | Α | A | D | D | С | A | A/250 | C | D | A/250 | A/120 | A/70 | A (150 | A |
| SULFURIC ACID (10%-75%) | A | D | D | D | C | Α | Α | В | D | D | С | В | A/150 | D | D | A/250 | A/72 | B/70 | A/150 | A |
| SULFURIC ACID (CONCENTRATED TO 98%) | В | D | D | D | C | A | A | C | D | D | В | - | A/150 | D | D | A/250 | C/72 | B/70 | A/120 | D |
| SULFURIC ACID (20% OLEUM) | D | D | D | D | D | В | Α | - D | D | D | - D | - D | - A /2F0 | D | D | A/250 | D | - D/100 | - | - |
| SULFUROUS ACID SYRUP | A | D - | B | _ | - | A | Α | В | D | D | В | B - | A/250 | D - | D | A/212 | A | B/120 | Α - | А |
| TALL OIL | A | - | - D | A - | - | A - | - | A - | A - | - | A - | - | - | - | - A | A/250 | A - | - | - | - |
| TALLOW | В | A | - | A | A | A | A | A | A | - | A | - | - | A/70 | A | Ay 230 | B/70 | C | - | - |
| TANNIC ACID | A | A | В | A | C | A | A | A | C | C | A | В | A/250 | C | В | A/250 | Α | A | A | A |
| TANNING LIQUORS | A | - A | - D | C | - | A | A | - A | С | - | A | А | A/250 | A/70 | В | Ay 230 | A | A/70 | - A | A |
| TAR, BITUMINOUS | В | - | С | В | D | A | A | - | - | В | В | - | A/230 | B | В | - | - | - | - | - |
| TARTARIC ACID | A | Α | В | A | В | A | A | С | С | C | A | В | A/250 | B/70 | В | A/250 | A | A/70 | Α | Α |
| TERPINEOL | В | В | D | C | В | A | A | - | A | A | A | - | - | - | - | - | D | - | B/120 | - |
| TERTIARY BUTYL ALCOHOL | В | D | A | A | A | В | Α | - | - | - | - | - | - | - | Α | - | В | - | - | - |
| TERTIARY BUTYL CATECHOL | В | D | В | D | В | A | Α | - | С | В | В | - | - | - | Α | - | - | - | - | - |
| TERTIARY BUTYL MERCAPTAN | В | D | D | D | D | Α | Α | - | - | - | - | - | - | - | В | - | - | - | - | - |
| TETRA BROMOMETHANE | D | - | D | D | D | Α | Α | - | D | - | - | - | - | - | - | - | D | - | - | - |
| TETRABUTYL TITANATE | В | - | Α | В | В | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| TETRACHLOROETHYLENE | D | В | D | D | D | Α | Α | - | D | Α | Α | - | A/200 | A/70 | Α | A/250 | D | В | - | D |
| TETRACHLOROETHANE | D | - | - | D | D | Α | Α | - | D | Α | Α | - | - | С | Α | A/140 | D | - | - | С |
| TETRAETHYL LEAD | С | - | D | В | D | Α | Α | - | - | - | - | - | - | - | - | A/250 | A/70 | - | А | - |
| TETRAHYDROFURAN | В | С | D | D | С | В | Α | В | - | - | Α | Α | D | Α | С | A/212 | С | C/70 | B/70 | D |
| TETRALIN | C | - | D | D | D | Α | Α | - | Α | Α | Α | - | - | - | - | - | D | - | - | - |
| THIONYL CHLORIDE | В | - | D | D | D | Α | Α | - | D | D | - | - | A/150 | С | - | A/212 | D | - | D | - |
| TITANIUM TETRACHLORIDE | D | D | D | С | D | Α | Α | - | D | Α | В | - | - | A/70 | - | A/212 | D | - | Α | - |
| TOLUENE | C | С | D | С | D | Α | Α | В | Α | Α | Α | Α | A/200 | A/70 | Α | A/250 | D | C/70 | Α | - |
| TOLUENE DIISOCYANATE | В | - | D | - | Α | - | Α | - | - | - | - | - | - | - | С | - | - | - | - | - |
| TOLUENE, TOLUOL | C | С | D | D | D | Α | Α | В | A | Α | Α | - | A/150 | A/70 | Α | - | B/175 | C/70 | A | D |
| TOMATO JUICE | A | - | A | A | - | - | Α | Α | A | - | A | - | A/250 | A | Α | A/212 | A | A/70 | Α | A |
| TRANSFORMER OIL | D | D | C | В | D | A | Α | - | A | A | A | - | A/250 | A/70 | A | - | B/70 | - | - | В |
| TRANSMISSION FLUID TYPE A | C | A | C | A | D | A | Α | - | A | Α | Α | - | - | - | Α | - | - | - | - | - |
| TRIACETIN TRIBUITOVY ETHYL BHOSPHATE | A | D | A | A | A | С | Α | - | B - | - | - | - | - | - | - | - | - | - | - | - |
| TRIBUTOXY ETHYL PHOSPHATE | B B | D D | D D | D D | A | B D | Α | - | | | | | - Λ/72 | - | | | - Λ /7Ω | - | - Λ/70 | |
| TRIBUTYL PHOSPHATE | В | - U | D | D | C | A | A | - | - | A | - | - | A/73 | | - | A/140 | A/70 | - | A/70 | - |
| TRIBUTYL MERCAPTAN TRICHLOROACETIC ACID | В | D | В | С | В | В | A | - | D D | D | D | В | A/150 | D | - D | A/250 | B/70 | A | A/70 | В |
| TRICHLOROAGETIC ACID TRICHLORETHANE | D | D | D | D | D | А | A | - | D | В | A | A | A) 100 | С | A | ry ZUU | D D | _ A | A/120 | С |
| TRICHLORETHYLENE | D | D | D | D | D | A | A | D | D | С | A | A | A | A/70 | A | A/250 | B/72 | | Ay 120 | D |
| TRICHLOROPROPANE | D | - | A | A | - | A | A | - | D | A | A | A | _ A | - FY / U | A | - Ay 2,50 | D D | - | - | - |
| TRICRESYLPHOSPHATE | В | С | D | D | A | В | A | - | D | В | A | A | - | A/120 | C | - | B/70 | B/70 | - | D |
| TRIETHYLAMINE | В | - | В | A | - | A | A | - | - | A | - | - | A/150 | A/70 | A | A/212 | С | - | A/120 | В |
| TRIETHANOL AMINE | A | D | В | В | В | В | Α | D | В | Α | Α | - | A/73 | A/70 | Α | A/140 | A/70 | - | A/70 | - |
| | 1 | | | | | | · · · | | | | | | . , | .,,,, | | ., | . , , , , | | .,,,, | |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.



| CHEMICALS | | | EL | AST | OME | RS | | | | | MET/ | ALS | | | | P | LASTIC | S | | |
|-------------------------------|-----------|--------------|----------|--------|--------|--------|---------|---------------|----------|-----------|-----------------------|---------|---------------------|-------|----------------------------|-------|---------------|--------------|------|-----|
| | WIL-FLEX™ | POLYURETHANE | NEOPRENE | BUNA-N | NORDEL | VITON® | TEFLON® | SANIFLEX™ TPE | ALUMINUM | CAST IRON | STAINLESS STEEL (316) | ALLOY C | HALAR® ECTFE COATED | NYLON | CARBON-FILLED ACETAL (CFA) | ETFE | POLYPROPYLENE | POLYETHYLENE | PVDF | PVC |
| TRIETHYL ALUMINUM | В | - | D | D | - | В | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| TRIETHYL BORANE | В | - | D | D | - | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| TRINITROTOLUENE | Α | - | Α | D | D | С | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| TRIOCTYL PHOSPHATE | В | - | D | D | Α | В | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| TRISODIUM PHOSPHATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| TRIARYL PHOSPHATE | В | В | С | D | Α | Α | Α | - | - | - | - | - | - | - | - | - | - | - | - | - |
| TUNG OIL | В | В | В | Α | С | В | Α | С | Α | В | В | - | - | - | - | - | - | - | - | - |
| TURPENTINE | С | D | D | Α | D | Α | Α | - | Α | В | Α | В | A/200 | A/70 | Α | A/250 | B/175 | D | Α | - |
| UNLEADED GASOLINE | С | D | D | D | D | Α | Α | - | Α | Α | Α | Α | - | А | Α | - | D | - | С | - |
| URINE | - | - | - | - | - | - | - | - | - | - | 1 | - | - | - | - | A/212 | - | - | - | - |
| VARNISH | - | - | - | - | - | - | - | - | - | - | 1 | 1 | - | - | - | A/212 | - | - | - | - |
| VINEGAR | - | - | - | - | - | - | - | - | - | - | 1 | - | - | - | - | A/212 | - | - | - | - |
| VINYL ACETATE | - | - | - | - | - | - | - | - | - | - | 1 | - | - | - | - | A/250 | - | - | - | - |
| WATER, ACID, MINE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| WATER, DEMINERALIZED | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| WATER, DISTILLED, LAB GRADE 7 | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| WATER, FRESH | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| WATER, SALT | Α | Α | В | В | Α | Α | Α | Α | D | D | С | - | - | A/120 | Α | A/250 | Α | Α | Α | Α |
| WHITE LIQUOR (PULP MILL) | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| WINES | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/212 | - | - | - | - |
| XYLENE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| ZINC CHLORIDE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| ZINC NITRATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |
| ZINC SULFATE | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | A/250 | - | - | - | - |

Ratings: A: Minor effect; B: Minor to moderate effect; C: Moderate to severe effect; D: Not recommended; —: Insufficient information.

Wil-Flex is a trademark of Wilden Pump and Engineering, LLC. Saniflex is a trademark of Wilden Pump and Engineering, LLC.

Viton® is a registered trademark of DuPont Dow Elastomers. Teflon® is a registered trademark of Dupont.

The accuracy of these ratings cannot be guaranteed.




HALOGENATED SOLVENTS WARNING

Halogenated solvents can, under certain circumstances, corrode aluminum or galvanized parts. If the wetted parts or a pressurizable fluid system contain aluminum or galvanized parts, this corrosive action could cause an EXPLOSION. Although manufacturers of these solvents typically add inhibitors, there is no known inhibitor that will prevent the corrosive reaction under ALL circumstances. Special caution should be exercised handling reclaimed or used solvents since the inhibitors are often degraded. ONLY stainless steel or PVDF pumps should be used for these materials. Typical examples of halogenated hydrocarbon solvents (H.H.C.) include, but are not limited to, the following: Trichlorethane, Trichlorethylene, Methylene Chloride, Methyl Chloride, Carbon Tetrachloride, Chloroform, Dichlorethylene.

• Determine the pH value:

• pH is a measure of hydrogen-ion concentration. pH of 7 is neutral - below 7, acid - above 7, alkaline.

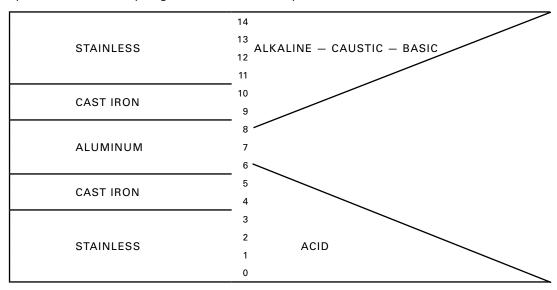

ELASTOMER SELECTION GUIDE FOR SOLVENTS

The liquids classified and listed below usually cannot be handled with Neoprene or Buna-N and will probably require Wil-Flex[™], Viton[®], Nordel and/or Teflon[®].

Ketones and Aldehydes Methyl ethyl ketone 1. 2. Methylacetone

3. Acetone

Benzene

Benzol

Hexane

1.

3.

4

Formaldehyde 4.

Aromatic Hydrocarbons

Toluol (toluene)

Xylene (xyol)

Cvclohexane Napthalene

Acetates

4.

Ethyl acetate 1. Isopropyl acetate Wil-Flex™ Amyl acetate Nordel/Teflon®

Butyl acetate **Chlorinated Hydrocarbons**

1. Carbon tetrachloride Trichlorethylene Ethylene dichloride 3. 4 Methyl chloride

5. Propyl chloride

Chloroform Dichlorethylene

TEMPERATURE LIMITS FOR ELASTOMERS

| Wil-Flex™ | –40° | to 107.2°C (-40° to +225° F) |
|---------------------------|--------|------------------------------|
| Neoprene | -17.8° | to 93.3°C (- 0° to +200° F) |
| Buna-N | -12.2° | to 82.2°C (+10° to +180° F) |
| Nordel | -51.1° | to 137.8°C (-60° to +280° F) |
| Viton [®] | –40° | to 176.7°C (-40° to +350° F) |
| Teflon® PTFE1 | 4.4° | to 104.4°C (+40° to +220° F) |
| Polyurethane | -12.2° | to 65.6°C (+10° to +150° F) |
| Saniflex [™] TPE | -28.9° | to 104.4°C (-20° to +220° F) |

Wil-Flex™

Nordel/Teflon®

Viton®/Teflon®

TEMPERATURE LIMITS FOR PLASTICS

0° to 79.4° C (+32° to +175° F) Polypropylene Polvethylene 0° to 70.0° C (+32° to +158° F) PVDF -12.2° to 107.2° C (+10° to +225° F) Teflon® PFA2 -28.9° to 107.2° C (-20° to +225° F) Acetal -28.9° to 82.2° C (-20° to +180° F) -17.8° to 93.3° C (0° to +200° F) Nylon

 2 –28.9° to 148.9° C (–20° to +300° F) - Ultrapure II and III models only.

NOTE: These are average temperatures. Chemicals and solvents can have an effect on temperature limits.

Viton®/Teflon®

¹ 4.4° to 148.9° C (40° to +300° F) - 13 mm (1/2") and 25 mm (1") models only.

RUBBER COMPOUNDS

Listed below are the various rubber compounds manufactured for use as elastomers in Wilden pumps. These compounds consist of natural rubber and man-made additives to increase the compounds' resistance to specific types of fluids. Diaphragms made of these compounds will utilize a nylon fabric mesh. The mesh is centered within the diaphragm during the molding process. The fabric mesh lends dimensional stability and strength to the compound. The elastomers manufactured of these compounds are fabricated using compression molding process.

| COMPOUND | COLOR CODE | MOLD STAMP | TEMPERATURE LIMITS | SUITABLE APPLICATIONS |
|----------|---------------|---------------|---------------------------------------|---|
| Neoprene | Green | NE | -17.8° to 93.3° C 0° to +200° F | An excellent general purpose diaphragm for use in non-aggressive applications such as water-based slurries, well water or sea water. Exhibits excellent flex life and low cost. |
| Buna-N | Red | BN | -12.2° to 82.2° C +10° to +180° F | Excellent for applications involving petroleum/oil-based fluids such as leaded gasolines, fuel oils, non-synthetic hydraulic oils, kerosene, turpentines and motor oils. |
| EPDM | Blue | ND | -51.1° to 137.8° C -60° to +280° F | Excellent for use in applications requiring extremely cold temperatures. May also be used as a low cost alternative when pumping dilute acids or caustics. |
| Viton® | Silver | VT | -40° to 176.7°C -40° to +350° F | Excellent for use in applications requiring extremely hot temperatures. May also be used with aggressive fluids such as aromatic or chlorinated hydrocarbons and highly aggressive acids. Teflon® would normally be used with these aggressive fluids as its flex life is better than Viton®. However, in applications involving suction lift outside the range of Teflon®, Viton® will be the preferred choice for highly aggressive fluids. |

THERMOPLASTIC COMPOUNDS


Listed below are the various thermoplastic (TPE) compounds manufactured for use as elastomers in Wilden pumps. These compounds are comprised entirely of man-made elements. Thermoplastic elastomers manufactured of these compounds are fabricated using an injection molding process. Diaphragms made of these compounds require no fabric reinforcement due to the dimensional stability and tensile strength inherent in TPE compounds.

| COMPOUND | COLOR CODE | TEMPERATURE LIMITS | SUITABLE APPLICATIONS |
|--------------|---------------|---|---|
| Polyurethane | Clear | –12.2° to 65.6 ° C 0° to +150 ° F | An excellent general purpose diaphragm for use in non-aggressive applications. This material exhibits exceptional flex life and durability. Wilden's least expensive diaphragm. |
| Wil-Flex™ | Orange | -40° to 107.2°C -40° to +225°F | Excellent choice as a low cost alternative to Teflon® in many acidic and caustic applications such as sodium hydroxide, sulfuric or hydrochloric acids. Exhibits excellent abrasion resistance and durability at a cost comparable to neoprene. |
| Saniflex™ | Cream | −28.9° to 104.4 ° C −20° to +220 ° F | Exhibits excellent abrasion resistance, flex life and durability. This material is FDA approved for food processing applications. An outstanding general purpose diaphragm as well. |

TEFLON® COMPOUNDS

Teflon® PTFE is one of the most chemically inert man-made compounds known. Wilden engineers were the first to discover that by reinforcing a molded Teflon® PTFE diaphragm with concentric ribs they could control the flex pattern of the diaphragm. The ribbed design extended flex life 5 to 10 times longer than that of any other Teflon® diaphragm. This innovation made the use of Teflon® elastomers in diaphragm pumps cost effective, greatly expanding the range of applications for diaphragm pumps. Teflon® is not an elastic material; therefore, Teflon® diaphragms require a rubber back-up diaphragm to provide flexibility and memory. Also, when using a Teflon® diaphragm, flow rates will be reduced by up to 20%. This is due to the inability of Teflon® to flex as far as a rubber diaphragm which will decrease displacement per stroke.

| COMPOUND | COLOR CODE | TEMPERATURE LIMITS | SUITABLE APPLICATIONS |
|--------------|---------------|---|--|
| Teflon® PTFE | White | - 4.4° to 104.4 ° C +40° to +220 ° F | Excellent choice when pumping highly aggressive fluids such as aromatic or chlorinated hydrocarbons, acids, caustics, ketones and acetates. Exhibits good flex life compared to a standard rubber diaphragm. |

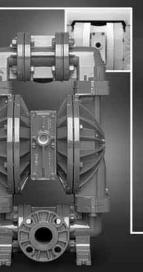

S E R I E S


Advance Your Process


Advanced wetted path designs
Lower the cost of operation
Maximize product containment
Longer MTBF (Mean Time Between Failures)
Enhanced internal clearance
The result of advanced thought



Enrich Your Process

Simplicity of design
Unique Technology
Reliable, leak-free & quiet
Validated & certified
Intrinsically safe
The result of unique thought

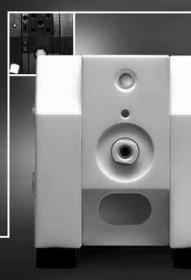

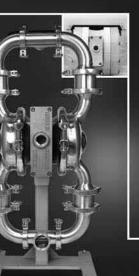

SANIFLO

Refine Your Process

Designed for sanitary applications
Minimize product degradation
Improved production yields
Easy to inspect, clean & assemble
Minimized water requirements
The result of progressive thought



Maximize Your Process

Electronic control & monitoring
Level control & containment
Pulsation dampening
Drum unloading systems
Complete system solutions
The result of innovative thought





ORIGINAL S E R I E S

Simplify Your Process

Long standing design simplicity
Portable & submersible
Variable connection options
Fewest parts in industry
Solutions since 1955
The result of original thought



Your Local Authorized Distributor:



22069 VAN BUREN STREET • GRAND TERRACE, CA 92313-5607 (909) 422-1730 • FAX (909) 783-3440 www.wildenpump.com